





REMOVAL AND INSTALLATION > CLUTCH PEDAL POSITION (CPP) SWITCH > REMOVAL

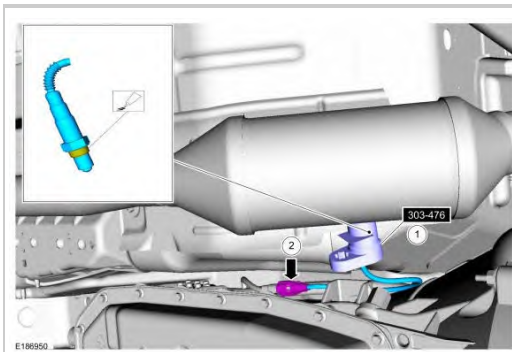

NOTE: Removal steps in this procedure may contain installation details.

1.

Disconnect the electrical connector and remove CPP switch from the bracket.

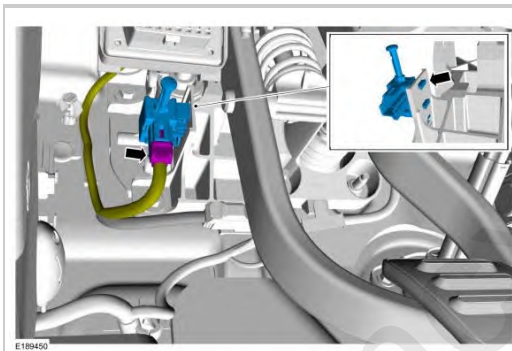

REMOVAL AND INSTALLATION > CLUTCH PEDAL POSITION (CPP) SWITCH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > CRANKSHAFT POSITION (CKP) SENSOR > REMOVAL

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .