


2.

Remove the nut, bolt and the heat shield.

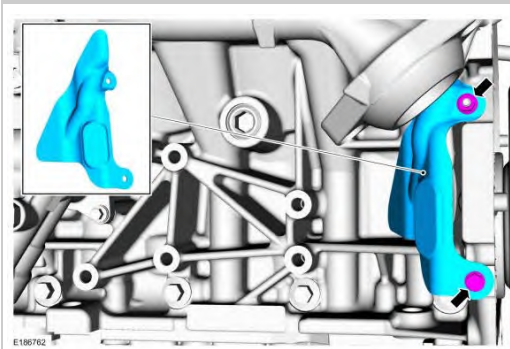

3.

Position aside the CKP sensor access plug.



 **NOTE:** Remove the bolt and the CKP sensor from the bell housing before disconnecting the electrical connector to prevent the CKP sensor from falling in the bell housing.

4.

Remove the bolt, disconnect the CKP sensor electrical connector and the sensor.

