


INSTALLATION

1.

Connect the CKP sensor electrical connector, install the sensor and the bolt.

Torque

: 89 lb.in (10 Nm)

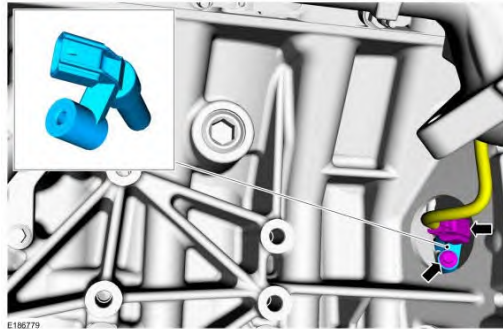

2.

Position back the CKP sensor access plug.



3.

Install the heat shield, nut and bolt.

Torque

: 97 lb.in (11 Nm)

