

4.

Using the scan tool, perform the Misfire Monitor Neutral Profile Correction procedure, following the on-screen instructions.

REMOVAL AND INSTALLATION > CYLINDER HEAD TEMPERATURE (CHT) SENSOR > REMOVAL




NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the lower intake manifold. Refer to: LOWER INTAKE MANIFOLD .

2.

Disconnect the CHT sensor electrical connector.

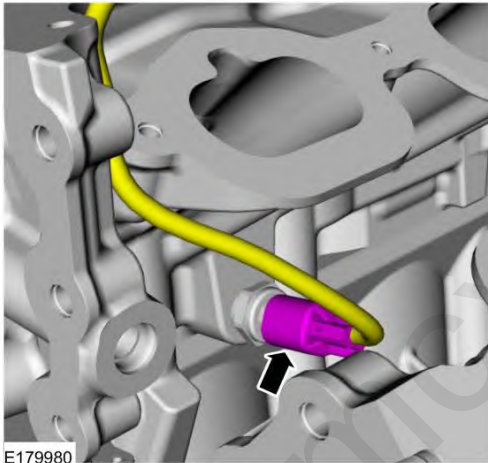

NOTE: Do not reuse the CHT sensor, install a new sensor.

3.

Remove and discard the CHT sensor.

Torque

: 89 lb.in (10 Nm)