


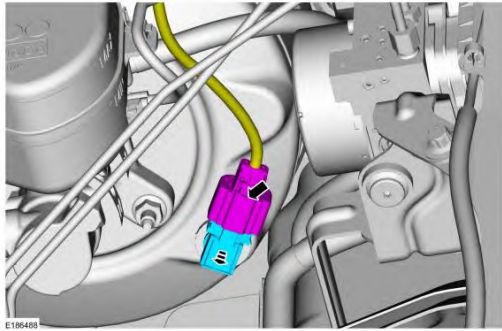

REMOVAL AND INSTALLATION > BRAKE VACUUM SENSOR > INSTALLATION



NOTE: Please note the correct installation position. It is critical that the sensor be installed in the exact position that it was removed.

1.

To install, reverse the removal procedure.