


3.: 22 lb.ft (30 Nm)

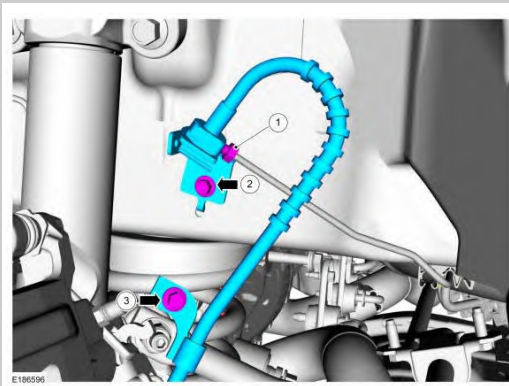

REMOVAL AND INSTALLATION > REAR BRAKE FLEXIBLE HOSE > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Bleed the brake system. Refer to: Brake System Pressure Bleeding .

REMOVAL AND INSTALLATION > BRAKE CALIPER - VEHICLES WITH: SVT PERFORMANCE PACKAGE > REMOVAL



NOTE: Make sure that all openings are sealed.



NOTE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.



NOTE: Removal steps in this procedure may contain installation details.

1.


Remove the brake pads. Refer to: Brake Pads - Vehicles With: SVT Performance Package .

2.

Remove the brake caliper flow bolt and disconnect the brake hose from the brake caliper. Discard the washers.


Torque

: 30 lb.ft (40 Nm)

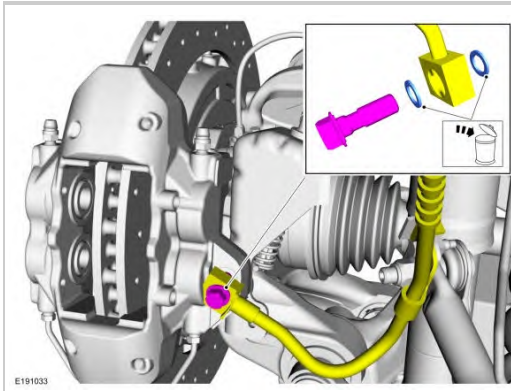


3.

Disconnect parking brake cable from parking brake shoe actuation lever.

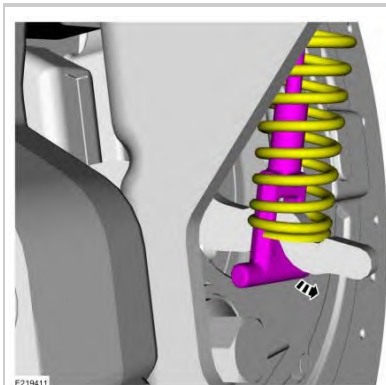

4.

Press inward on the tabs and detach the parking brake cable from the bracket.

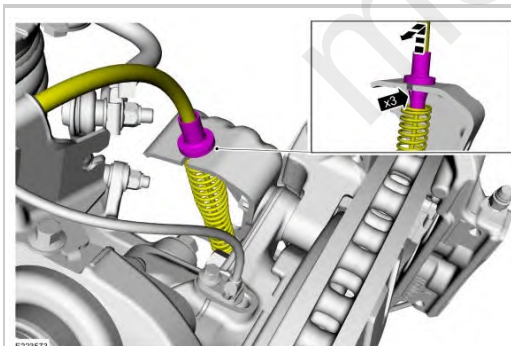

5.

1.

Remove and discard the bolts.

Torque