

2.


Remove the wheel bearing and wheel hub. Refer to: Wheel Bearing and Wheel Hub .

3.

Remove the bolts and the brake disc shield.

Torque

: 89 lb.in (10 Nm)

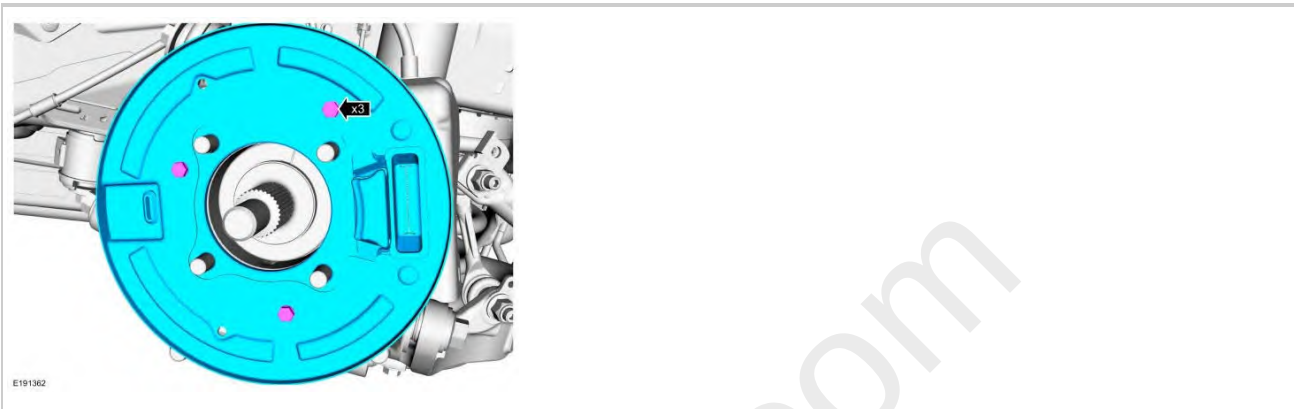

REMOVAL AND INSTALLATION > BRAKE DISC SHIELD - VEHICLES WITH: SVT PERFORMANCE PACKAGE > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > BRAKE PADS - VEHICLES WITH: SVT PERFORMANCE PACKAGE

Special Tool(s) / General Equipment

Brake Caliper Piston Retractor

REMOVAL AND INSTALLATION > BRAKE PADS - VEHICLES WITH: SVT PERFORMANCE PACKAGE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.