

## DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS



**NOTE:** Refer to the applicable service information to diagnose the body and chassis DTCs.



**NOTE:** An X equals any number 0 through 9 or the letter A through F.

## DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0001 - FUEL VOLUME REGULATOR CONTROL CIRCUIT/OPEN - DTC CHART

### P0001 - FUEL VOLUME REGULATOR CONTROL CIRCUIT/OPEN - DTC CHART

**Description:** This DTC sets when the PCM detects high or low voltage on the FVR and FVRRTN circuits.

**Possible Causes:**

- FVR circuit open
- FVRRTN circuit open
- Fuel volume regulator solenoid coil open

**Diagnostic Aids:**

| Application | Key On Engine Off        | Key On Engine Running | Continuous Memory |
|-------------|--------------------------|-----------------------|-------------------|
| All         | GO to Pinpoint Test HP . |                       |                   |

## DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0003 - FUEL VOLUME REGULATOR CONTROL CIRCUIT LOW - DTC CHART

### P0003 - FUEL VOLUME REGULATOR CONTROL CIRCUIT LOW - DTC CHART

**Description:** This DTC sets when the PCM detects high or low voltage on the FVR and FVRRTN circuits.

**Possible Causes:**

- FVR circuit short to ground