

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS



NOTE: Refer to the applicable service information to diagnose the body and chassis DTCs.



NOTE: An X equals any number 0 through 9 or the letter A through F.

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0001 - FUEL VOLUME REGULATOR CONTROL CIRCUIT/OPEN - DTC CHART

P0001 - FUEL VOLUME REGULATOR CONTROL CIRCUIT/OPEN - DTC CHART

Description: This DTC sets when the PCM detects high or low voltage on the FVR and FVRRTN circuits.

Possible Causes:

- FVR circuit open
- FVRRTN circuit open
- Fuel volume regulator solenoid coil open

Diagnostic Aids:

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test HP .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0003 - FUEL VOLUME REGULATOR CONTROL CIRCUIT LOW - DTC CHART

P0003 - FUEL VOLUME REGULATOR CONTROL CIRCUIT LOW - DTC CHART

Description: This DTC sets when the PCM detects high or low voltage on the FVR and FVRRTN circuits.

Possible Causes:

- FVR circuit short to ground