


Use Special Service Tool: 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.

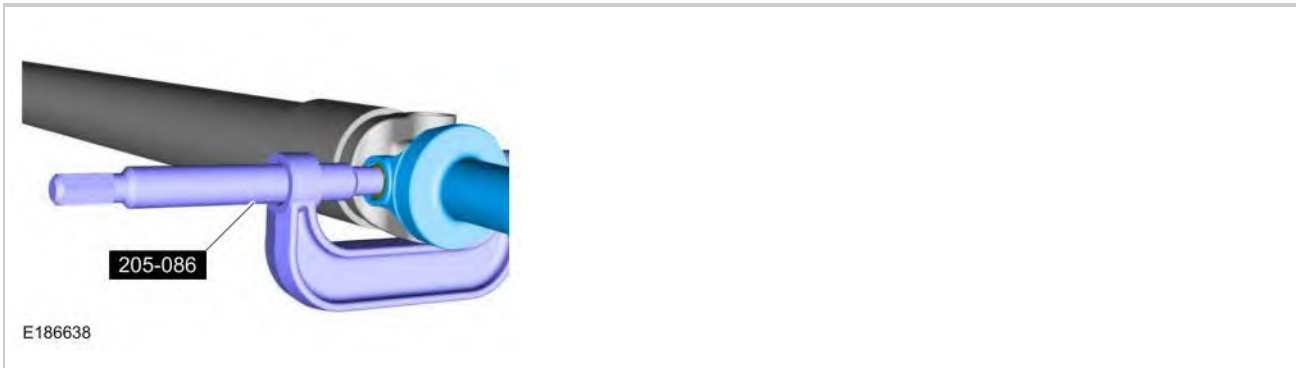

5.

Using the special tool, press the u-joint bearing cups out of the driveshaft yoke and remove the u-joint.

Use Special Service Tool: 205-086 (T74P-4635-C) Installer/Remover, C-Frame and Screw.



6.

Clean and inspect the u-joint bearing cup surfaces.



DISASSEMBLY AND ASSEMBLY > DRIVESHAFT UNIVERSAL JOINT > ASSEMBLY



NOTE: Install the u-joint kits as complete assemblies only. Do not mix components from other u-joint kits.

1.

To install, reverse the removal procedure.

mcx30.com