

Install the rear brake pads. Refer to: Brake Pads .

REMOVAL AND INSTALLATION > DRIVE PINION FRONT BEARING > REMOVAL AND INSTALLATION



 
NOTE: The outer differential bearing cup needs to be replaced when replacing the outer differential bearing.

1.

Refer to: Drive Pinion .

REMOVAL AND INSTALLATION > DRIVE PINION SEAL

Special Tool(s) / General Equipment

	205-208 (T83T-4676-A) Installer, Drive Pinion Oil Seal TKIT-1983-F TKIT-1983-FLM TKIT-1983-FX
Flat Headed Screw Driver	

REMOVAL AND INSTALLATION > DRIVE PINION SEAL > REMOVAL

1.

Remove the drive pinion flange. Refer to: Drive Pinion Flange .

2.

Using a flat blade screwdriver, remove and discard the drive pinion seal. Use the General Equipment: Flat Headed Screw Driver