

- Battery terminal corrosion
- KAPWR to PCM interrupt/open
- Incorrect battery connection

Diagnostic Aids: If KAPWR is interrupted to the PCM because of a battery or PCM disconnect, this DTC can be generated on the first power-up.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test QB .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0604 - INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR - DTC CHART

P0604 - INTERNAL CONTROL MODULE RANDOM ACCESS MEMORY (RAM) ERROR - DTC CHART

Description: This DTC sets when the PCM RAM has been corrupted.

Possible Causes:

- Module reprogramming
- Aftermarket performance products
- Damaged PCM

Diagnostic Aids: Reprogram or update the calibration. Check for other DTCs or drive symptoms for further action. Check for aftermarket performance products before installing a new PCM. If it is necessary to install a new PCM, refer to FLASH ELECTRICALLY ERASABLE PROGRAMMABLE READ ONLY MEMORY (EEPROM) , Programming the VID Block for a Replacement PCM.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	Refer to the Description, Possible Causes and Diagnostic Aids for the DTC.		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0605 - INTERNAL CONTROL MODULE READ ONLY MEMORY (ROM) ERROR - DTC CHART

P0605 - INTERNAL CONTROL MODULE READ ONLY MEMORY (ROM) ERROR - DTC CHART

Description: The PCM ROM has been corrupted.

Possible Causes:

- An attempt was made to change the calibration