



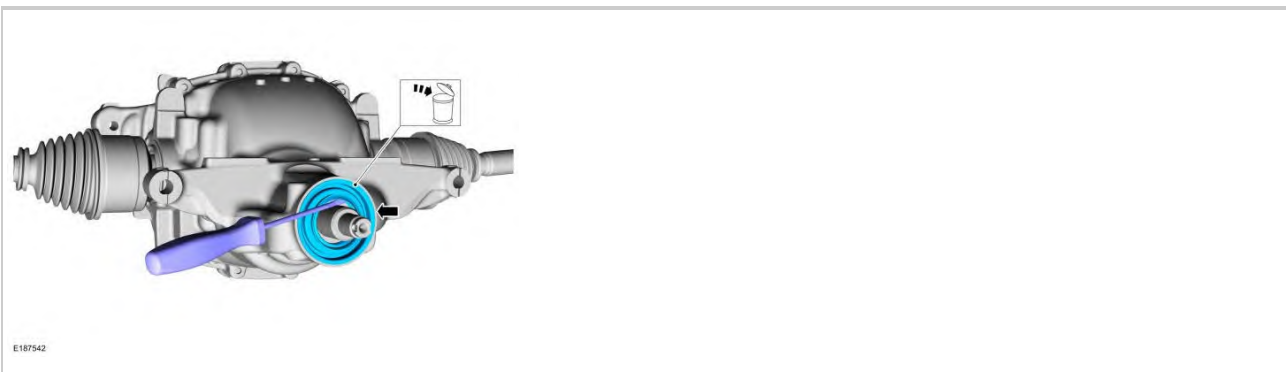

REMOVAL AND INSTALLATION > DRIVE PINION SEAL > INSTALLATION

1.

Using the special tool, install the drive pinion seal. Use Special Service Tool: 205-208 (T83T-4676-A) Installer, Drive Pinion Oil Seal.

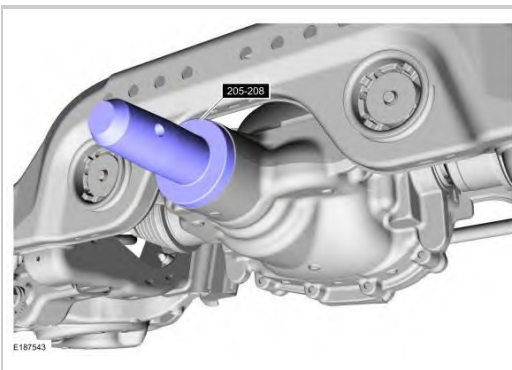

2.

Install the drive pinion flange. Refer to: Drive Pinion Flange .

REMOVAL AND INSTALLATION > REAR HALFSHAFT SEAL

Special Tool(s) / General Equipment

 E188618	205-1013 Installer, Rear Axle pilot bearing TKIT-2014D-FL_ROW TKIT-2014D-ROW2
	205-504 Installer, Halfshaft Pilot Bearing TKIT-2002N-F/FM TKIT-2002N-FLM TKIT-2002N-LM