

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0704 - CLUTCH SWITCH INPUT CIRCUIT - DTC CHART

P0704 - CLUTCH SWITCH INPUT CIRCUIT - DTC CHART

Description: When the clutch pedal is applied the voltage switches to low. This DTC sets if the PCM does not see the clutch pedal voltage change from high to low.

Possible Causes:

- CPP circuit short to voltage
- Damaged clutch pedal position (CPP) switch
- SIGRTN circuit open

Diagnostic Aids: When the clutch pedal is applied and then released, the clutch pedal switch voltage should cycle.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test TA .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0720 - OUTPUT SHAFT SPEED (OSS) SENSOR CIRCUIT - DTC CHART

P0720 - OUTPUT SHAFT SPEED (OSS) SENSOR CIRCUIT - DTC CHART

Description: This DTC sets when the OSS sensor signal input exceeds the calibrated threshold. The OSS sensor provides a signal to the PCM based on the speed of the output shaft of the transmission.

Possible Causes:

- OSS circuit short to ground
- OSS circuit short to voltage
- OSS circuit open
- Damaged OSS sensor

Diagnostic Aids: Verify the sensor signal output varies with the vehicle speed.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
Manual Transmission	GO to Pinpoint Test DP .		
Automatic Transmission	Refer to the service information , Automatic Transmission, Diagnostic Trouble Code (DTC) Index to continue diagnosis.		