

Diagnostic Aids: Check the wiring, connector, and OSS sensor for damage.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
Manual Transmission	GO to Pinpoint Test DP .		
Automatic Transmission	Refer to the service information , Automatic Transmission, Diagnostic Trouble Code (DTC) Index to continue diagnosis.		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P0723 - OUTPUT SHAFT SPEED (OSS) SENSOR CIRCUIT INTERMITTENT - DTC CHART

P0723 - OUTPUT SHAFT SPEED (OSS) SENSOR CIRCUIT INTERMITTENT - DTC CHART

Description: This DTC sets when the OSS sensor signal provided to the PCM is irregular or interrupted.

Possible Causes:

- OSS connector not correctly seated
- OSS circuit intermittently short
- OSS circuit intermittently open
- Damaged OSS connector
- OSS sensor not installed correctly
- Damaged OSS sensor

Diagnostic Aids: Verify OSS harness and connector integrity.
Verify correct installation of the OSS sensor.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
Manual Transmission	GO to Pinpoint Test DP .		
Automatic Transmission	Refer to the service information , Automatic Transmission, Diagnostic Trouble Code (DTC) Index to continue diagnosis.		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P07XX - DTC CHART

P07XX - DTC CHART

Description: