

P117A - ENGINE OIL OVER TEMPERATURE - FORCED LIMITED POWER - DTC CHART

Description: This DTC sets when the engine oil protection strategy is enabled when the engine oil temperature reaches a predetermined level in the PCM. The PCM then limits the engine RPMs until the engine oil temperature returns to normal.

Possible Causes:

- Engine overheating
- Low engine coolant
- Loaded weight is greater than the maximum vehicle weight rating. Refer to the Owner's Literature for vehicle weight ratings.

Diagnostic Aids: This DTC is an informational DTC and may be set by an engine overheating concern. If the engine overheats, check the cooling system. Refer to the service information , Engine Cooling, to diagnose the engine overheats symptom.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	Refer to the Description, Possible Causes and Diagnostic Aids for the DTC.		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P1184 - ENGINE OIL TEMPERATURE (EOT) SENSOR OUT OF SELF-TEST RANGE - DTC CHART

P1184 - ENGINE OIL TEMPERATURE (EOT) SENSOR OUT OF SELF-TEST RANGE - DTC CHART

Description: This DTC sets when the EOT was out of self-test range.

Possible Causes:

- Engine oil temperature below self-test threshold

Diagnostic Aids: The engine should be at operating temperature before carrying out the self-test.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	Refer to the Description, Possible Causes and Diagnostic Aids for the DTC.		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P124X - DTC CHART

P124X - DTC CHART

Description: