

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P2123 - THROTTLE/PEDAL POSITION SENSOR/SWITCH D CIRCUIT HIGH - DTC CHART

P2123 - THROTTLE/PEDAL POSITION SENSOR/SWITCH D CIRCUIT HIGH - DTC CHART

Description: This DTC sets when the accelerator pedal position 1 (APP1) is out of self-test range high.

Possible Causes:

- APP1 circuit open
- APP1 circuit short to voltage
- Damaged APP sensor

Diagnostic Aids: An APP1 sensor PID reading may indicate a concern.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test DK .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P2127 - THROTTLE/PEDAL POSITION SENSOR/SWITCH E CIRCUIT LOW - DTC CHART

P2127 - THROTTLE/PEDAL POSITION SENSOR/SWITCH E CIRCUIT LOW - DTC CHART

Description: This DTC sets when the accelerator pedal position 2 (APP2) is out of self-test range low.

Possible Causes:

- APP2 circuit open
- APP2 circuit short to ground
- Damaged APP sensor

Diagnostic Aids: An APP2 sensor PID reading may indicate a concern.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test DK .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P2128 - THROTTLE/PEDAL POSITION SENSOR/SWITCH E CIRCUIT HIGH - DTC CHART

P2128 - THROTTLE/PEDAL POSITION SENSOR/SWITCH E CIRCUIT HIGH - DTC CHART