

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > BATTERY CABLES - 5.0L 32V TI-VCT > REMOVAL



NOTE: This procedure provides information about routing, retaining points and connectors of the cable. It does not include the steps for removing components to gain access to the cable.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Disconnect the battery. Refer to: Battery Disconnect and Connect .

3.

1.

Torque

: 44 lb.in (5 Nm)

2.

Torque

: 80 lb.in (9 Nm)

3.

Torque

: 106 lb.in (12 Nm)

4.


Torque

: 89 lb.in (10 Nm)

5.

Torque


: 89 lb.in (10 Nm)

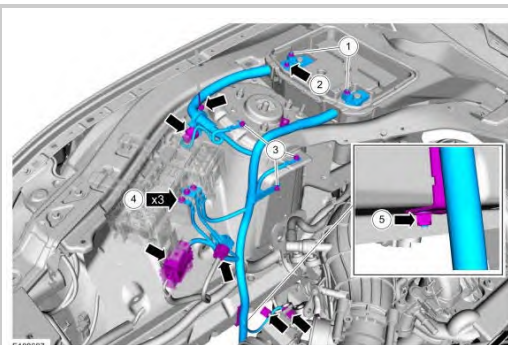

4.

Torque


: 115 lb.in (13 Nm)

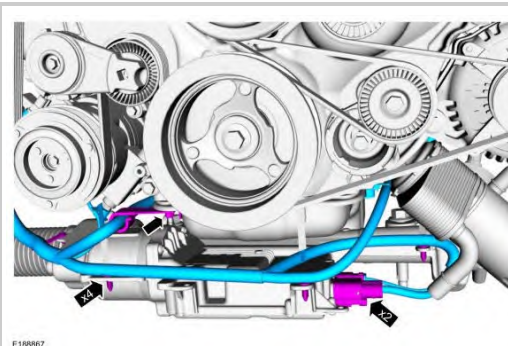

5.

Torque

: 150 lb.in (17 Nm)

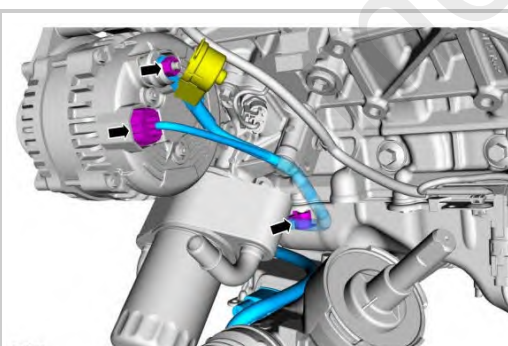

NOTE: Vehicle with manual transmission shown, automatic transmission similar.

6.

1.

If equipped with a manual transmission.

2.

Torque

: 53 lb.in (6 Nm)

3.


Torque

: 106 lb.in (12 Nm)

4.


Torque

: 35 lb.ft (47 Nm)

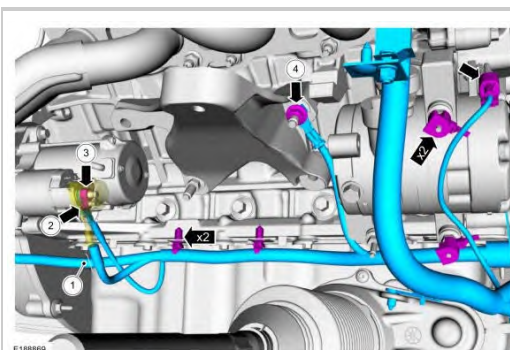

Vehicles with manual transmission

7.

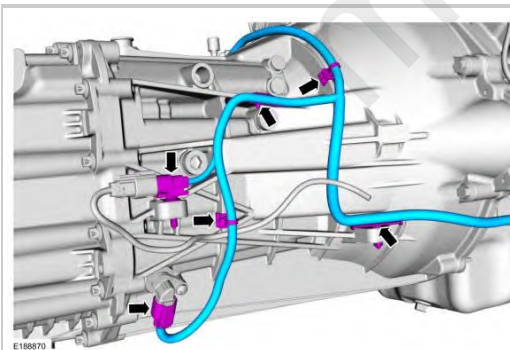

8.