

All	GO to Pinpoint Test JF .
-----	--------------------------

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P2312 - IGNITION COIL E PRIMARY CONTROL CIRCUIT LOW - DTC CHART

P2312 - IGNITION COIL E PRIMARY CONTROL CIRCUIT LOW - DTC CHART

Description: This DTC sets when there is a short to ground in the COP5 circuit.			
Possible Causes:			
• COP5 circuit short to ground • Damaged ignition coil • Damaged ignition coil wiring harness			
Diagnostic Aids:			
Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test JF .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P2313 - IGNITION COIL E PRIMARY CONTROL CIRCUIT HIGH - DTC CHART

P2313 - IGNITION COIL E PRIMARY CONTROL CIRCUIT HIGH - DTC CHART

Description: This DTC sets when there is a short to voltage in the COP5 circuit.			
Possible Causes:			
• COP5 circuit short to voltage • Damaged ignition coil • Damaged ignition coil wiring harness			
Diagnostic Aids:			
Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test JF .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > P2315 - IGNITION COIL F PRIMARY CONTROL CIRCUIT LOW - DTC CHART

P2315 - IGNITION COIL F PRIMARY CONTROL CIRCUIT LOW - DTC CHART