

DTC CHART

Description: The PCM continuously monitors the controller area network (CAN) for messages from the ABS. This DTC sets when the PCM fails to receive the ABS message within the defined amount of time.

Possible Causes:

- Communication error

Diagnostic Aids: Check for other PCM DTCs or PCM related symptoms. Diagnose all other PCM DTCs or PCM related symptoms first.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test QA .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > U0138 - LOST COMMUNICATION WITH ALL TERRAIN CONTROL MODULE - DTC CHART

U0138 - LOST COMMUNICATION WITH ALL TERRAIN CONTROL MODULE - DTC CHART

Description: The PCM continuously monitors the controller area network (CAN) for messages from the all terrain control module (ATCM). This DTC sets when the PCM does not receive the ATCM message within the defined amount of time.

Possible Causes:

- Communication error

Diagnostic Aids: Check for other PCM DTCs or PCM related symptoms. Diagnose all other PCM DTCs or PCM related symptoms first.

Application	Key On Engine Off	Key On Engine Running	Continuous Memory
All	GO to Pinpoint Test QA .		

DIAGNOSTIC TROUBLE CODE (DTC) CHARTS AND DESCRIPTIONS > U0140 - LOST COMMUNICATION WITH BODY CONTROL MODULE - DTC CHART

U0140 - LOST COMMUNICATION WITH BODY CONTROL MODULE - DTC CHART

Description: The PCM continuously monitors controller area network (CAN) for messages from body control module (BCM). This DTC sets when the PCM does not receive the BCM message within the defined amount of time.

Possible Causes:

- Communication error