


2.


Release the retainer and remove the BJB cover.

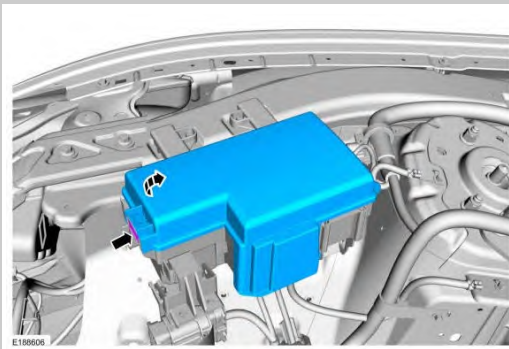

*NOTE: Note the orientation and position of the generator current sensor tape tab.*

3.

Remove the nut and position the battery cable. Disconnect the generator current sensor electrical connector. Index-mark the battery cable at the generator current sensor. Remove and discard the tape securing the generator current sensor to the battery cable and remove the generator current sensor.

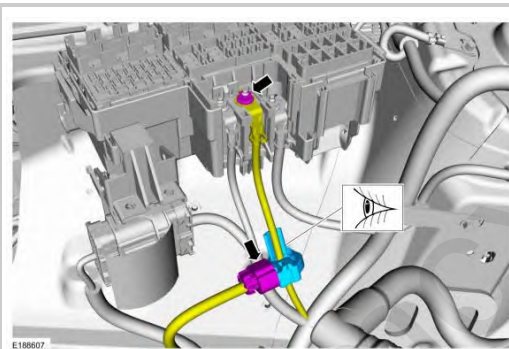

## REMOVAL AND INSTALLATION > GENERATOR CURRENT SENSOR > INSTALLATION




*NOTE: The generator current sensor must be installed in the proper position and orientation to function correctly.*

1.

With the generator current sensor tape tab pointing away from the generator, position the generator current sensor to the index-mark on the battery cable and secure with electrical tape. Connect the generator current sensor electrical connector. Position the battery cable and install the nut.


Torque

: 89 lb.in (10 Nm)

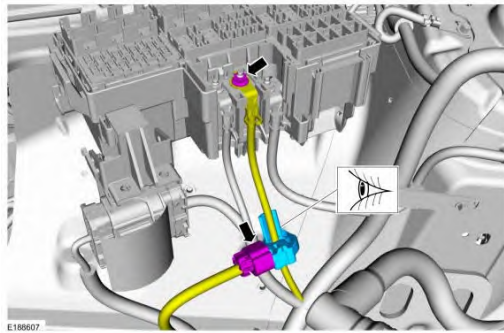

2.

Install the BJB cover.

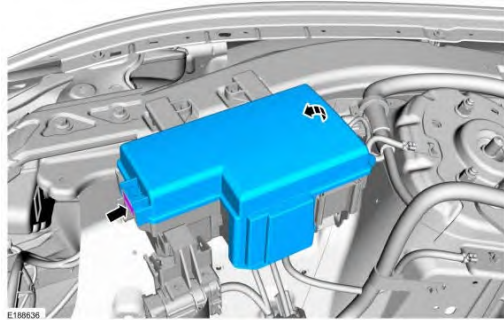

3.

Connect the battery. Refer to: Battery Disconnect and Connect .