

7.

Disconnect the quick release coupling and routing clips. Remove the fuel tank pressure sensor and tube. Refer to: QUICK RELEASE COUPLING .



REMOVAL AND INSTALLATION > FUEL TANK PRESSURE SENSOR AND TUBE > INSTALLATION

1.

To install, reverse the removal procedure.