

DESCRIPTION AND OPERATION > FUEL CHARGING AND CONTROLS - COMPONENT
LOCATION

5.0L 32V Ti-VCT



Item	Description
1	Throttle Body (TB)
2	Fuel injector
3	Fuel rail

FPDM



Item	Description
1	FPDM. (The FPDM is located beneath the rear seat cushion on the LH side).

DESCRIPTION AND OPERATION > FUEL CHARGING AND CONTROLS - SYSTEM
OPERATION AND COMPONENT DESCRIPTION > SYSTEM OPERATION

For System Operation, Refer to ENGINE CONTROLS - DESCRIPTION & OPERATION (EXCEPT DIESEL & HYBRID) .