


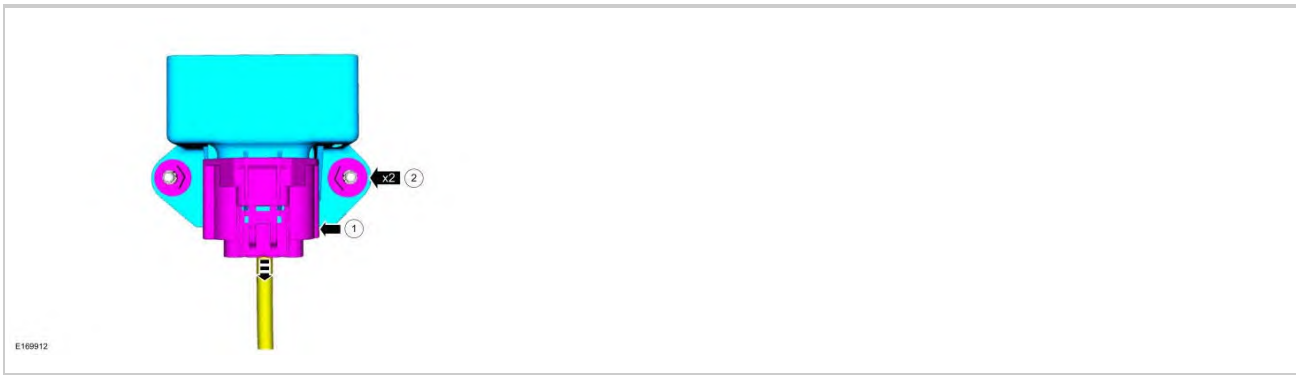

REMOVAL AND INSTALLATION > FUEL PUMP DRIVER MODULE (FPDM) > INSTALLATION

1.

1.


Install the FPDM, then install and tighten the FPDM retaining nuts.

Torque

: 44 lb.in (5 Nm)

2.

Connect the FPDM electrical connector.

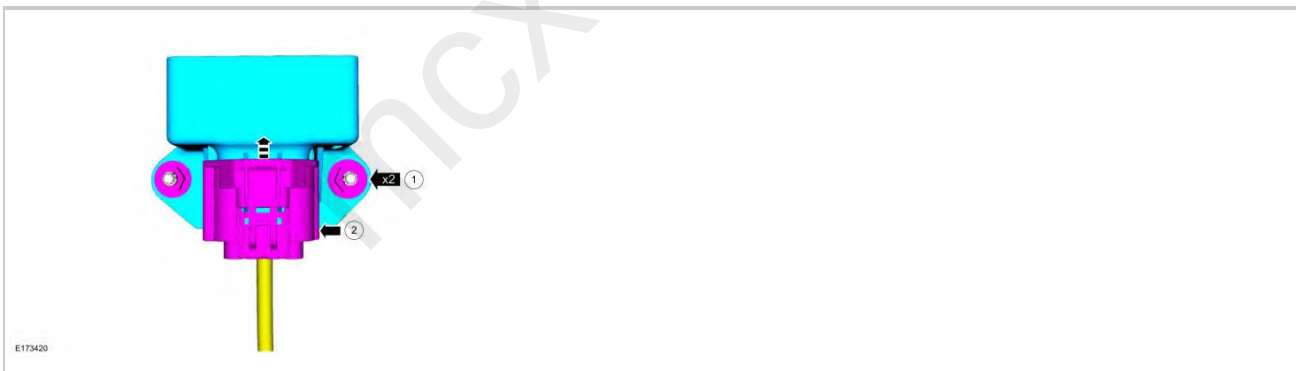

2.

Install the rear seat cushion. Refer to: Rear Seat Cushion .

REMOVAL AND INSTALLATION > FUEL RAIL > REMOVAL

1.

Release the fuel system pressure. Refer to: FUEL SYSTEM PRESSURE RELEASE - 5.0L 32V Ti-VCT/5.0L Ti-VCT V8 (308kW/418PS).