

B11E7:12	Air Distribution Damper Position Sensor: Circuit Short To Battery	GO to Pinpoint Test E
B11E7:14	Air Distribution Damper Position Sensor: Circuit Short To Ground or Open	GO to Pinpoint Test E
B11F0:12	Air Intake Damper Position Sensor: Circuit Short To Battery	GO to Pinpoint Test D
B11F0:14	Air Intake Damper Position Sensor: Circuit Short To Ground or Open	GO to Pinpoint Test D
B1A61:11	Cabin Temperature Sensor: Circuit Short To Ground	GO to Pinpoint Test N
B1A61:15	Cabin Temperature Sensor: Circuit Short To Battery or Open	GO to Pinpoint Test N
B1A63:11	Right Solar Sensor: Circuit Short To Ground	GO to Pinpoint Test O
B1A63:15	Right Solar Sensor: Circuit Short To Battery or Open	GO to Pinpoint Test O
B1A64:11	Left Solar Sensor: Circuit Short To Ground	GO to Pinpoint Test O
B1A64:15	Left Solar Sensor: Circuit Short To Battery or Open	GO to Pinpoint Test O
B1A69:12	Humidity Sensor: Circuit Short To Battery	GO to Pinpoint Test N
B1A69:14	Humidity Sensor: Circuit Short To Ground or Open	GO to Pinpoint Test N
B1B71:11	Evaporator Temperature Sensor: Circuit Short To Ground	GO to Pinpoint Test P
B1B71:15	Evaporator Temperature Sensor: Circuit Short To Battery or Open	GO to Pinpoint Test P
C1B14:11	Sensor Supply Voltage A: Circuit Short To Ground	GO to Pinpoint Test Q
C1B14:12	Sensor Supply Voltage A: Circuit Short To Battery	GO to Pinpoint Test Q
All Other FCIM Diagnostic Trouble Codes (DTCs) not listed in this chart	-	Refer to the appropriate article for the procedure.

DIAGNOSIS AND TESTING > CLIMATE CONTROL SYSTEM - VEHICLES WITH: DUAL AUTOMATIC TEMPERATURE CONTROL (DATC) > DTC CHART: POWERTRAIN