

Ignition OFF.

Check the FEAD belt and tensioner for damage and correct installation. REFER to: Accessory Drive .

Is the accessory drive OK?

Yes	GO to C2
No	REPAIR as necessary.

C2 CHECK THE GENERATOR MOUNTING

Check the generator mounting for loose bolts or misalignment.

Is the generator mounted correctly?

Yes	GO to C3
No	REPAIR as necessary.

C3 CHECK THE GENERATOR FOR NOISE

Start the engine.

With the engine running, use a stethoscope or equivalent listening device to probe the generator and the accessory drive area for unusual mechanical noise.

Is the generator the noise source?

Yes	GO to C4
No	REFER to: ENGINE SYSTEM - GENERAL INFORMATION to diagnose the source of the engine noise.

C4 CHECK GENERATOR CLUTCH OPERATION

Ignition OFF.

Perform the generator clutch component test .

Is the generator clutch OK?

Yes	INSTALL a new generator. REFER to: Generator - 2.3L EcoBoost (201kW/273PS) .
No	INSTALL a new generator clutch. REFER to: GENERATOR PULLEY .