


Remove the nut and position the generator B+ cable.

Torque

: 159 lb.in (18 Nm)

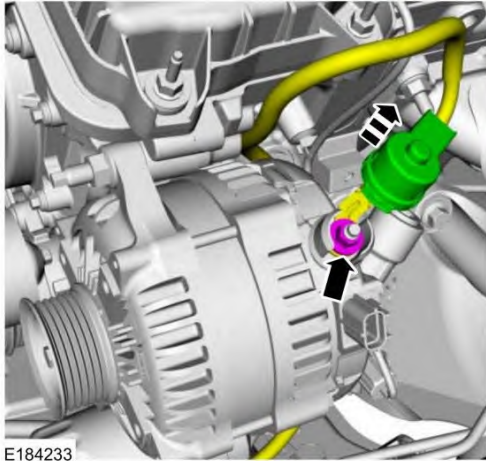


6.

Remove the nut, bolt and the generator.

Torque

: 35 lb.ft (47 Nm)

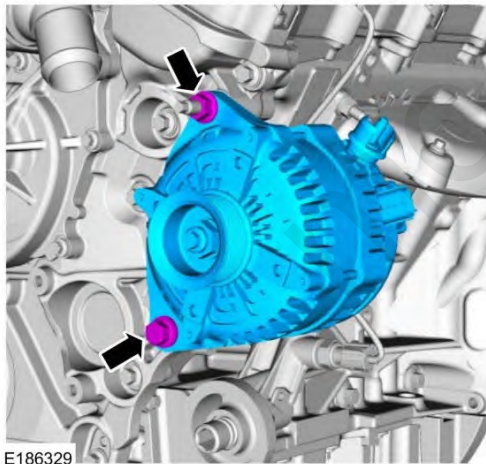

REMOVAL AND INSTALLATION > GENERATOR - 3.7L DURATEC (227KW 301PS) > INSTALLATION

1.

To install, reverse the removal procedure.