

DIAGNOSIS AND TESTING > HORN > DTC CHART(S)

DTC Chart: Horn

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices.
REFER to: Diagnostic Methods .

Body Control Module (BCM) DTC Chart

DTC	Description	Actions
B1323:11	Horn Switch: Circuit Short To Ground	GO to Pinpoint Test B
B1C55:12	Horn Relay: Circuit Short to Battery	GO to Pinpoint Test A
B1C55:14	Horn Relay: Circuit Short to Ground or Open	If the horn is inoperative, GO to Pinpoint Test A If the horn is always on, GO to Pinpoint Test B

DIAGNOSIS AND TESTING > HORN > SYMPTOM CHART(S)

Symptom Chart: Horn

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices.
REFER to: Diagnostic Methods .

Symptom Chart

Condition	Possible Sources	Actions
The horn is inoperative	Refer to Pinpoint Test	GO to Pinpoint Test A
The horn is always on	Refer to Pinpoint Test	GO to Pinpoint Test B

DIAGNOSIS AND TESTING > HORN > PINPOINT TESTS > PINPOINT TEST A : THE HORN IS INOPERATIVE

Refer to Horn/Cigar Lighter for schematic and connector information.

Normal Operation and Fault Conditions

REFER to: Horn - System Operation and Component Description .

DTC Chart

DTC	Description	Fault Trigger Condition
B1C55:12	Horn Relay: Circuit Short to Battery	A Continuous Memory Diagnostic Trouble Code (CMDTC) that sets when the BCM detects a short to