

REMOVAL AND INSTALLATION > INSTRUMENT PANEL CENTER FINISH PANEL


Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > INSTRUMENT PANEL CENTER FINISH PANEL > REMOVAL

1.

Release the clips and remove RH instrument panel trim panel. Use the General Equipment: Interior Trim Remover

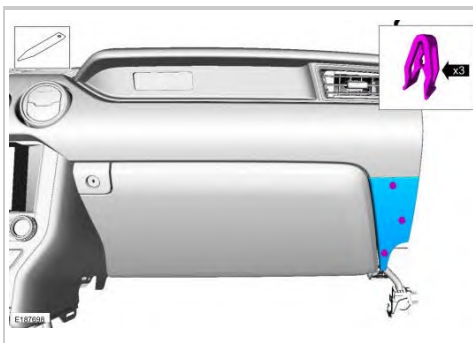


 **NOTE:** Instrument panel center finish panel with optional ICM shown.

2.

Release the clips and remove the instrument panel center finish panel.

Disconnect the ICM electrical connector, if equipped. Use the General Equipment: Interior Trim Remover

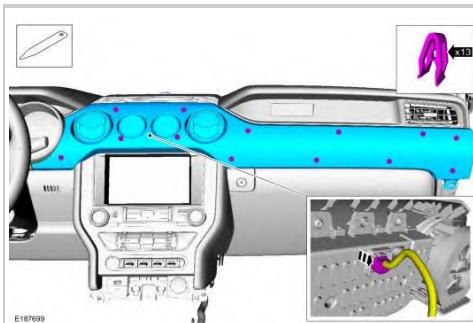

REMOVAL AND INSTALLATION > INSTRUMENT PANEL CENTER FINISH PANEL > INSTALLATION