

DTC	Description	Fault Trigger Conditions
U2010:00	Switch Illumination: No Sub Type Information	A continuous and on-demand DTC that sets in the BCM when the DDM detects a short to ground or open on the switch illumination circuit.

Possible Sources

- Wiring, terminals or connectors
- Driver door lock/unlock switch
- DDM

DIAGNOSIS AND TESTING > INSTRUMENT PANEL AND INTERIOR SWITCHES ILLUMINATION > PINPOINT TEST > PINPOINT TEST E : THE DRIVER DOOR LOCK/MEMORY SET SWITCH ILLUMINATION IS INOPERATIVE OR ALWAYS ON > PINPOINT TEST E : THE DRIVER DOOR LOCK/MEMORY SET SWITCH ILLUMINATION IS INOPERATIVE OR ALWAYS ON

E1 VERIFY THE DOOR LOCK SWITCH FUNCTIONALITY

Actuate the door locks from the driver door lock switch.

Can the doors be locked and unlocked from the driver door lock switch?

Yes	If the switch illumination is inoperative, GO to E2 If the switch illumination is always on, GO to E5
No	REFER to: Locks, Latches and Entry Systems .

E2 CHECK THE ILLUMINATION CIRCUIT FOR VOLTAGE

Ignition OFF.

Disconnect Driver lock/unlock switch C541 .

Place the headlight switch in the ON position and increase the illumination to full intensity.

Ignition ON.

Measure:

Positive Lead	Measurement / Action	Negative Lead
C541-4		Ground