

DESCRIPTION AND OPERATION > INSTRUMENT PANEL CLUSTER (IPC) - OVERVIEW > OVERVIEW

The IPC uses gauges, warning and informational indicators, RTT indicators, warning messages and chimes to alert the driver of vehicle conditions and system operation. The message center provides menu selections to configure various vehicle features. For a complete list and description of the features the message center controls, refer to the Owner's Literature.

The IPC provides a single display screen that contains the message center, RTT indication and virtual gauge displays.

Depending on option level, the IPC provides the following virtual gauge displays:

- Accelerometer
- Air fuel ratio
- Battery voltage
- Vacuum boost gauge (non-SVT only)
- Cylinder head temperature
- Engine oil pressure (SVT only)
- Engine oil temperature
- Inlet air temperature
- Transmission fluid temperature


Informational indicators inform the driver of conditions that exist in the vehicle. Warning indicators provide information to the driver of conditions that could potentially cause personal injury or alter vehicle performance.

RTT indicators illuminate in the message center and replace the typical informational or warning indicator, using the same iconic representation. The message center uses a rotating RTT display area that can display multiple indicators, if needed, while using fixed locations for other indicators and displays.



NOTE: Metric IPC similar.

Base IPC

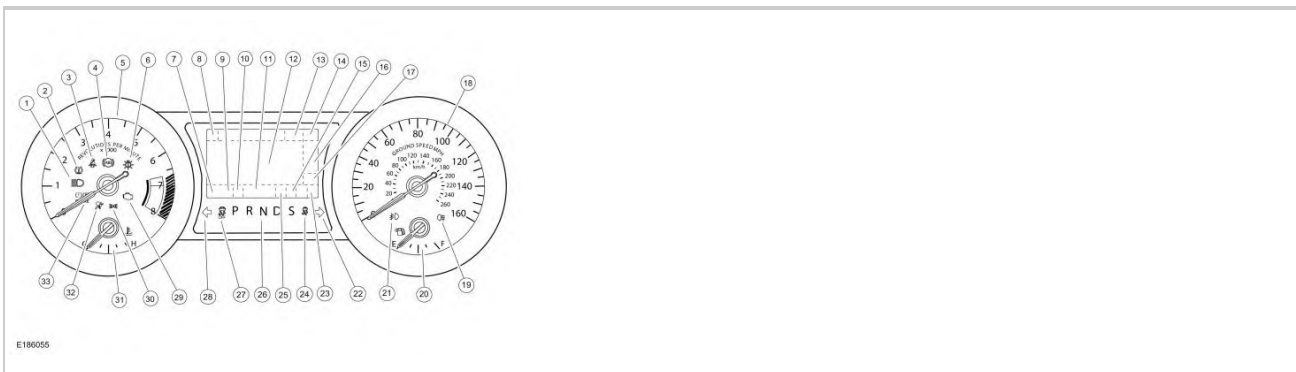


Base IPC

Item	Description
1	High beam indicator
2	TPMS indicator
3	Safety belt warning indicator
4	ABS indicator
5	Tachometer
6	LED low beam malfunction indicator
7	Odometer display
8	Menu navigation indicator
9	Upshift RTT (if equipped)
10	SelectShift® display
11	Rotating RTT display area Engine over-temperature Hood ajar Low battery Low fuel Low oil pressure Powertrain malfunction (wrench)
12	Main message center display area
13	Overspeed warning RTT
14	Compass
15	Drive mode RTT display Snow-wet Sport Sport plus Track
16	ACC display (if equipped)
17	Digital speed display

18	Speedometer
19	Rear fog lamp indicator (if equipped)
20	Fuel gauge
21	Front fog lamp indicator
22	RH turn indicator
23	Cruise control RTT
24	Stability-traction control indicator (sliding car icon)
25	Launch control RTT display (if equipped)
26	PRNDL display
27	Stability-traction control disabled indicator (sliding car OFF icon)
28	LH turn indicator
29	MIL
30	Lights on indicator
31	Temperature gauge
32	Airbag warning indicator
33	Brake warning indicator

SVT IPC

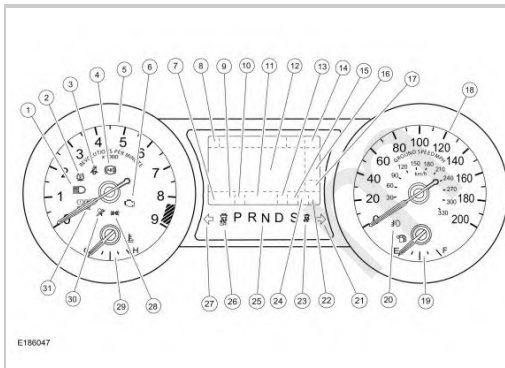

SVT IPC

Item	Description
1	High beam indicator
2	TPMS indicator
3	Safety belt warning indicator
4	ABS indicator
5	Tachometer

6	MIL
7	Odometer display
8	Menu navigation indicator
9	Upshift RTT (if equipped)
10	SelectShift ® display
11	Rotating RTT display area Engine over-temperature Hood ajar Low battery Low fuel Low oil pressure Powertrain malfunction (wrench)
12	Main message center display area
13	Launch control RTT display (if equipped)
14	Compass
15	Drive mode RTT display Drag strip Normal Sport Track Weather
16	Steering feel RTT (upper half) Adjustable dampers (lower half)
17	Digital speed display
18	Speedometer
19	Fuel gauge
20	Front fog lamp indicator
21	RH turn indicator
22	Cruise control RTT
23	Stability-traction control indicator (sliding car icon)
24	Steering mode RTT
25	PRNDL display
26	Stability-traction control disabled indicator (sliding car OFF icon)
27	LH turn indicator
28	Lights on indicator
29	Temperature gauge
30	Airbag warning indicator