

		Test AO
P2066	Fuel Level Sensor "B" Circuit Range/Performance	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . If sent here from the Engine Controls article, GO to Pinpoint Test C
P2067	Fuel Level Sensor "B" Circuit Low	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . If sent here from the Engine Controls article, GO to Pinpoint Test C
P2068	Fuel Level Sensor "B" Circuit High	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . If sent here from the Engine Controls article, GO to Pinpoint Test C
P25B0	Fuel Level Sensor "A" Stuck	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . If sent here from the Engine Controls article, GO to Pinpoint Test C
P25B1	Fuel Level Sensor "B" Stuck	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . If sent here from the Engine Controls article, GO to Pinpoint Test C
P25B2	Fuel Level Sensor "A" or "B" Stuck	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . If sent here from the Engine Controls article, GO to Pinpoint Test C
All other DTCs	-	Refer to ENGINE CONTROLS - INTRODUCTION (EXCEPT DIESEL & HYBRID) . Refer to the appropriate article for the procedure.

DIAGNOSIS AND TESTING > INSTRUMENTATION, MESSAGE CENTER AND WARNING CHIMES > DTC CHART: STEERING COLUMN CONTROL MODULE (SCCM)