



General Procedures

NOTE: Make sure that the vehicle is standing on a level surface.


1. Centralize the steering and lock it in position.

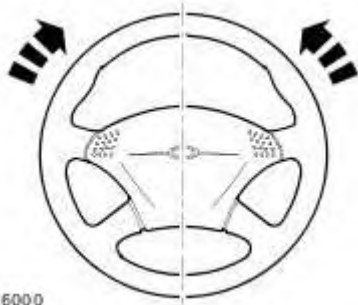


2. Loosen the tie-rod end locknuts.

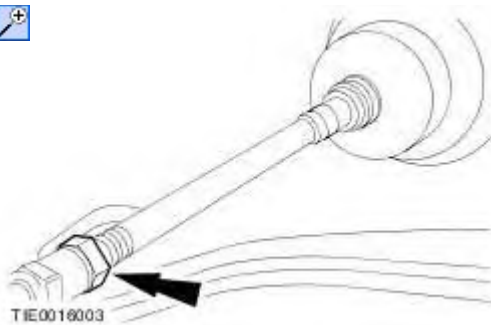


3. Remove the steering gear boot outer clamps.

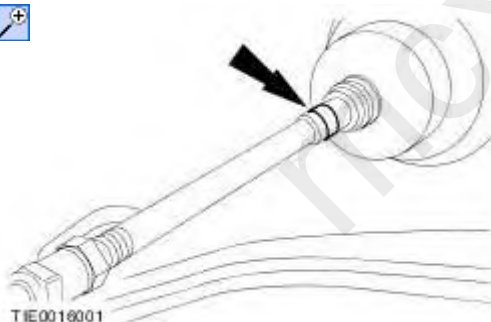

4. Rotate the tie-rods an equal amount in either a clockwise or a counterclockwise direction to adjust the toe setting.
For additional information, refer to: [Specifications](#) (204-00 Suspension System - General Information, Specifications).

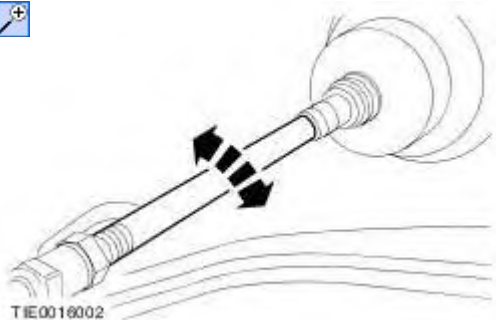

5. Tighten the tie-rod end locknuts.
For additional information, refer to: [Tie Rod End](#) (211-03 Steering Linkage, Removal and Installation).

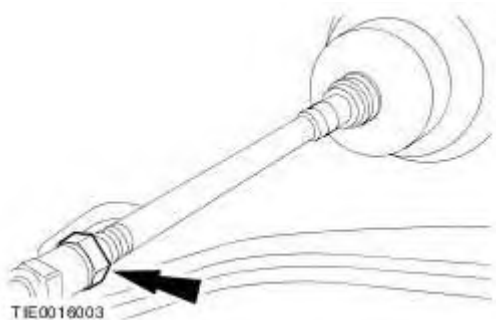

6. Install the steering gear boot outer clamps.

