


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. On both sides.

Torque: 55 Nm

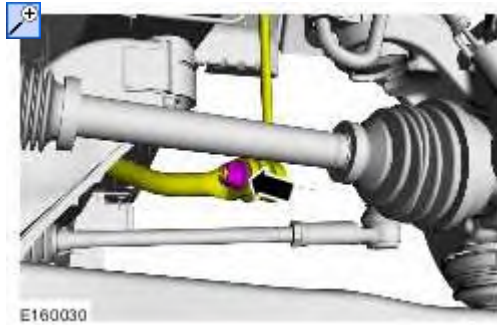

3. On both sides.

Torque: 63 Nm

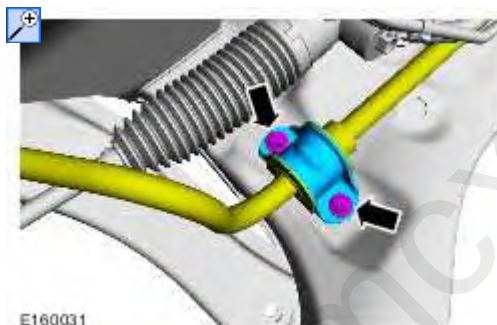

- 4.



Installation

1. To install, reverse the removal procedure.
2. Refer to: [Front Toe Adjustment](#) (204-00 Suspension System - General Information, General Procedures).