


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. On both sides.

Torque: 30 Nm

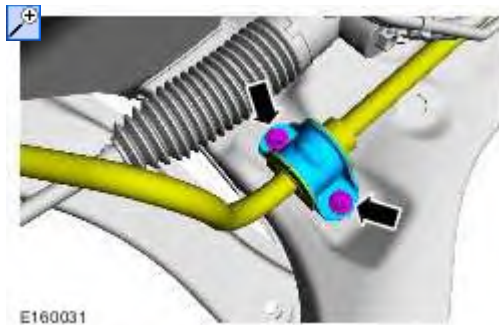

3. NOTE: Note the position of the components before removal.
NOTE: Make sure that the components are installed to the position noted before removal.
On both sides.



Installation

1. To install, reverse the removal procedure.