


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2.  NOTICE: Make sure that the ball joint ball does not rotate.

Torque: 55 Nm

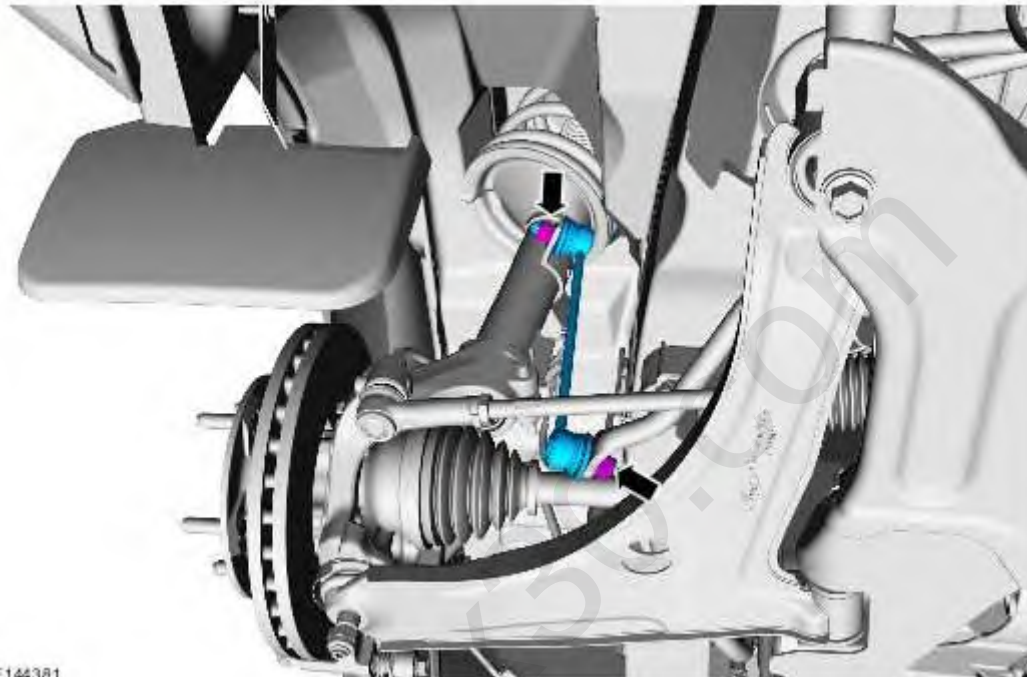

E144381

Installation

1. To install, reverse the removal procedure.