

Removal and Installation

General Equipment

Two Leg Puller


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Loosen: 3 turn(s)



3.
 1. Use the General Equipment: [Two Leg Puller](#)
 - 2.

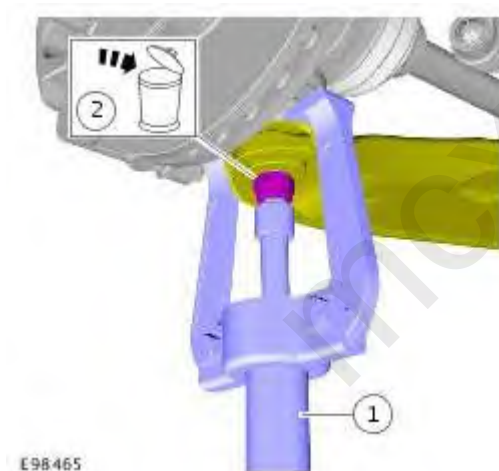

4. Torque: 275 Nm

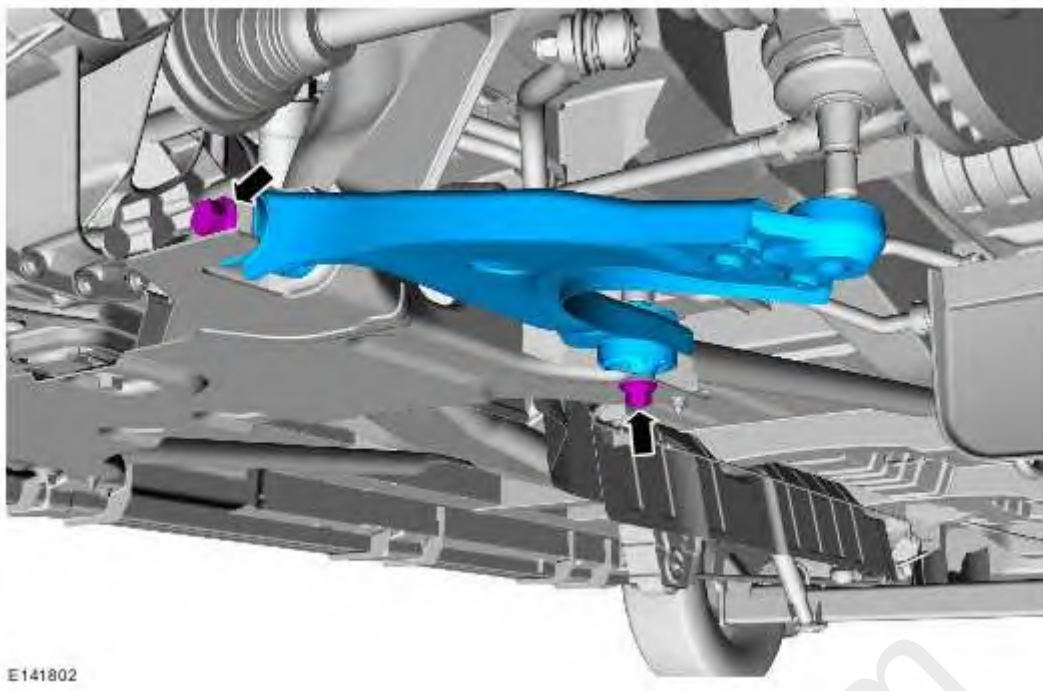


E141802

Installation


Vehicles With: Lower Arm Ball Joint Secured With Two Bolts

1.

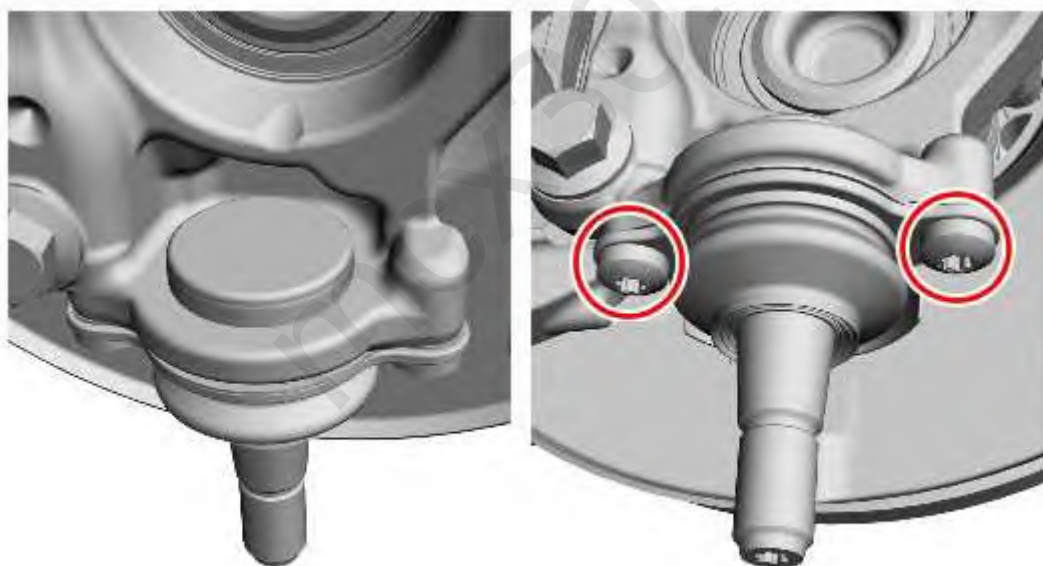

E248033

2. Torque: 215 Nm

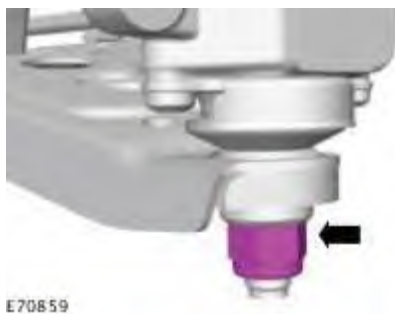


Vehicles With: Lower Arm Ball Joint Secured With a Circlip

3.



4. Torque: 150 Nm

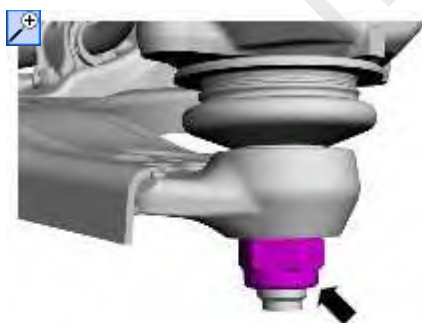

All vehicles

5. To install, reverse the removal procedure.

6. Refer to: [Front Toe Adjustment](#) (204-00 Suspension System - General Information, General Procedures).

mcx30.com