


Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Torque: 25 Nm

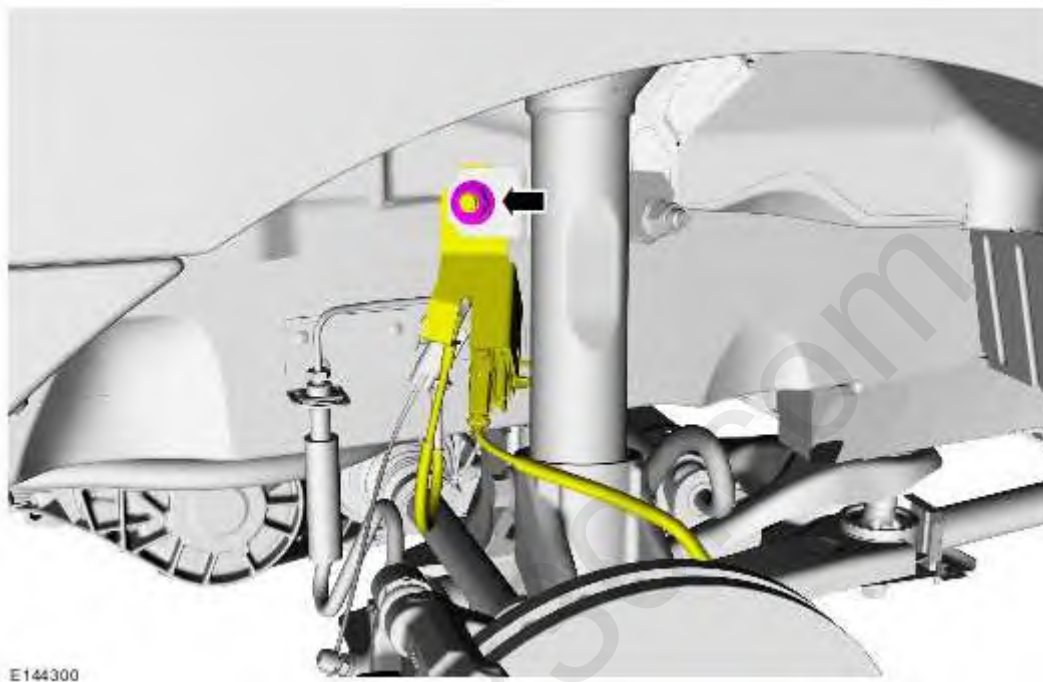

3.  NOTICE: Make sure that the ball joint ball does not rotate.
Torque: 55 Nm

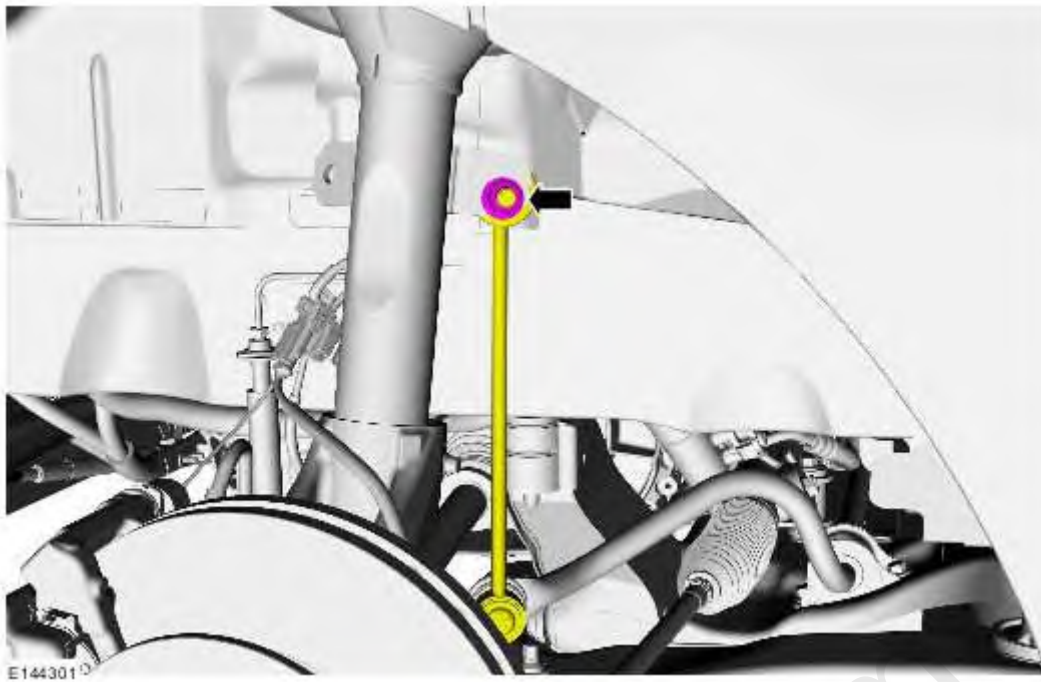


4. *Torque:*
Stage 1: 100 Nm
Stage 2: 180°

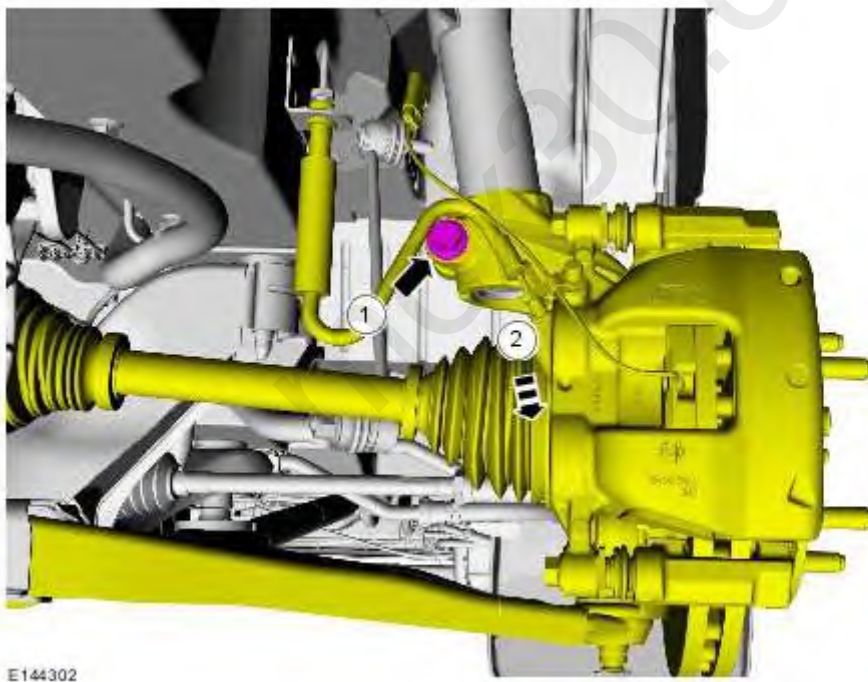


5.




6.

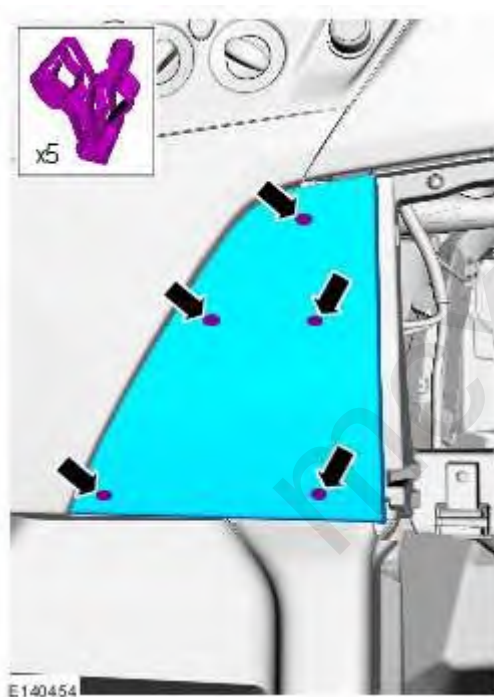

7.

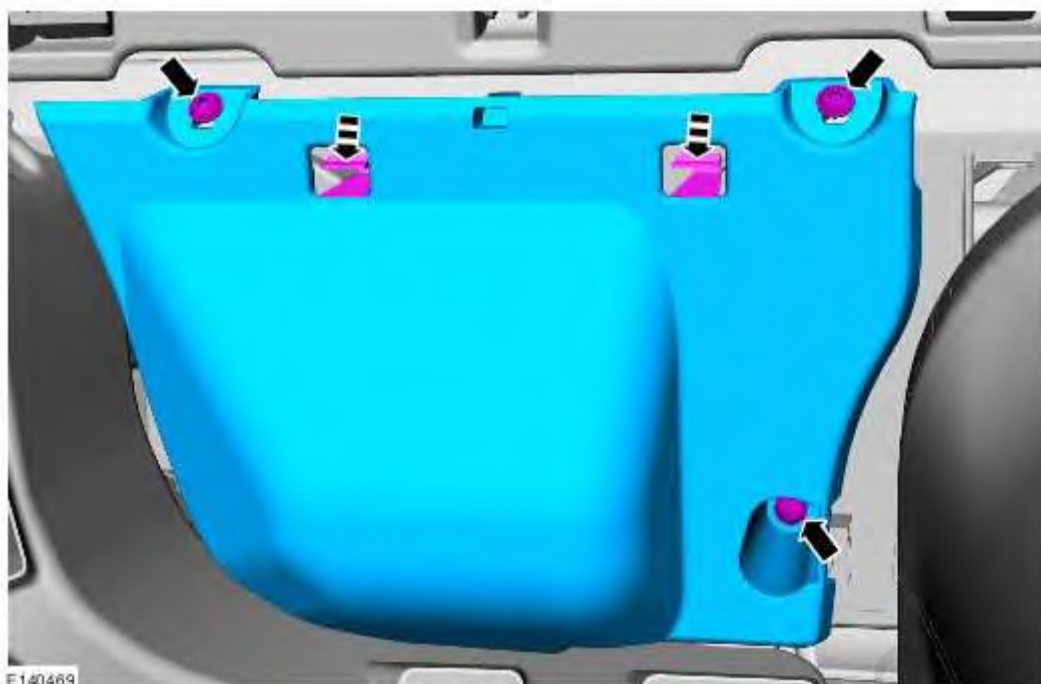


8.

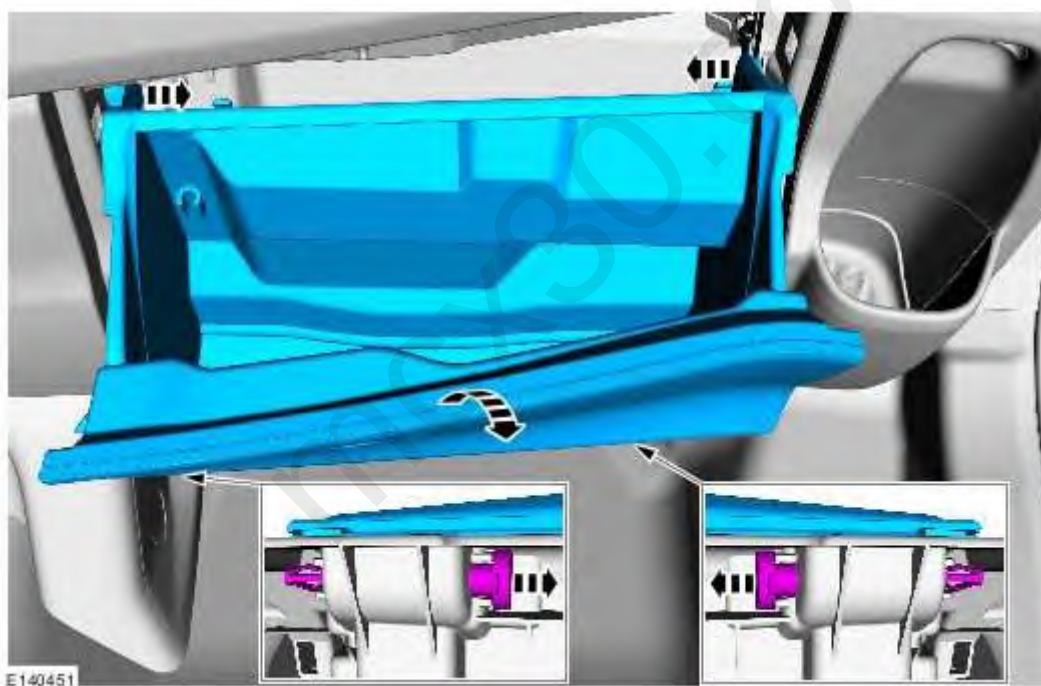


9.




10.

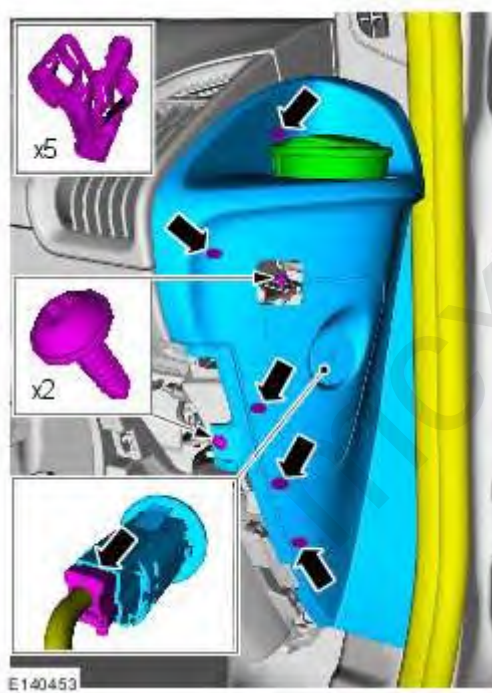


11.

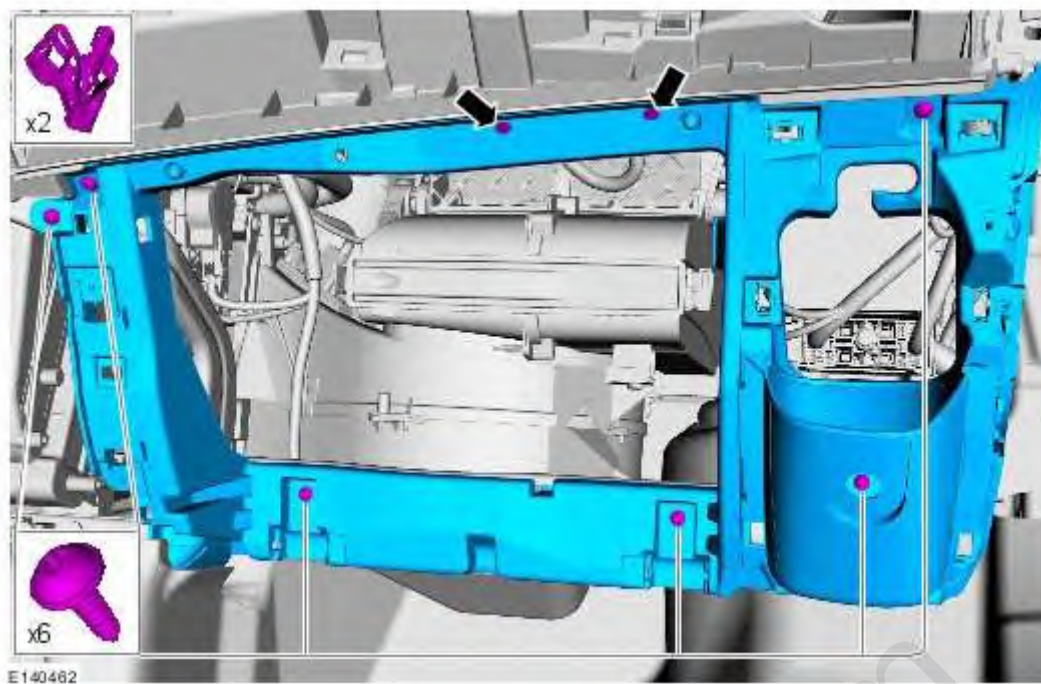


12. Torque: 10 Nm

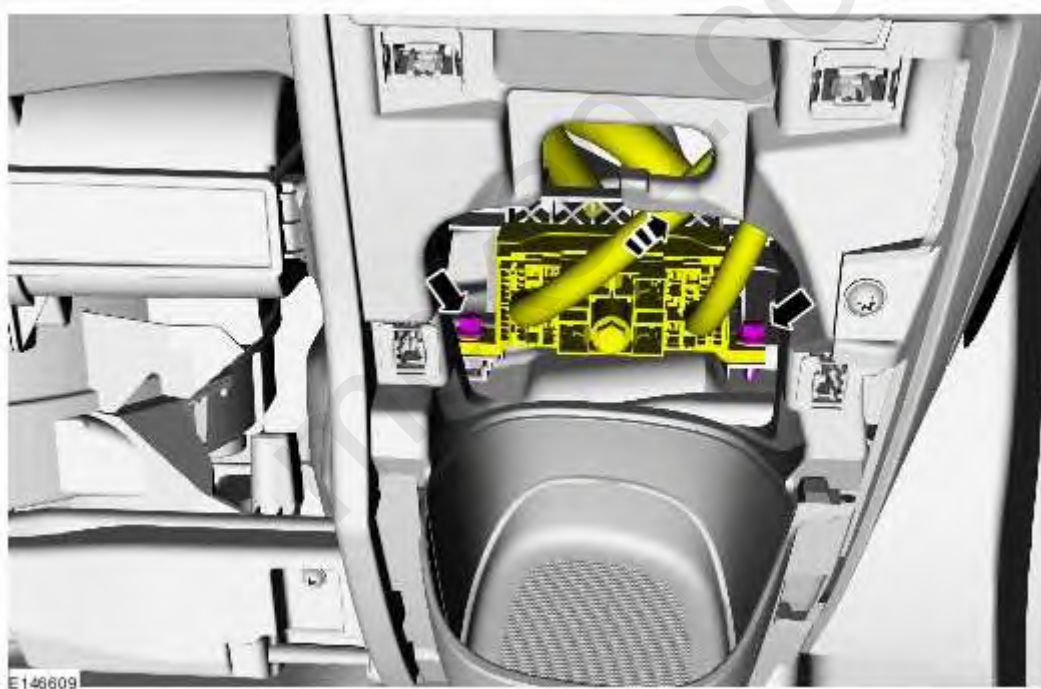

13.

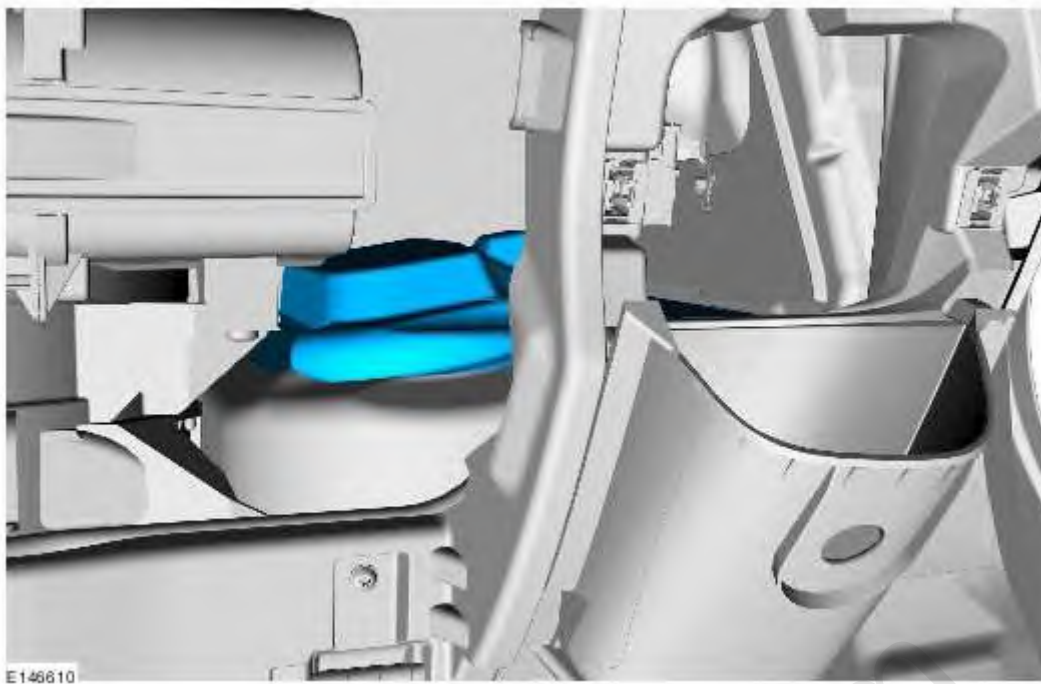

14. Torque: 30 Nm

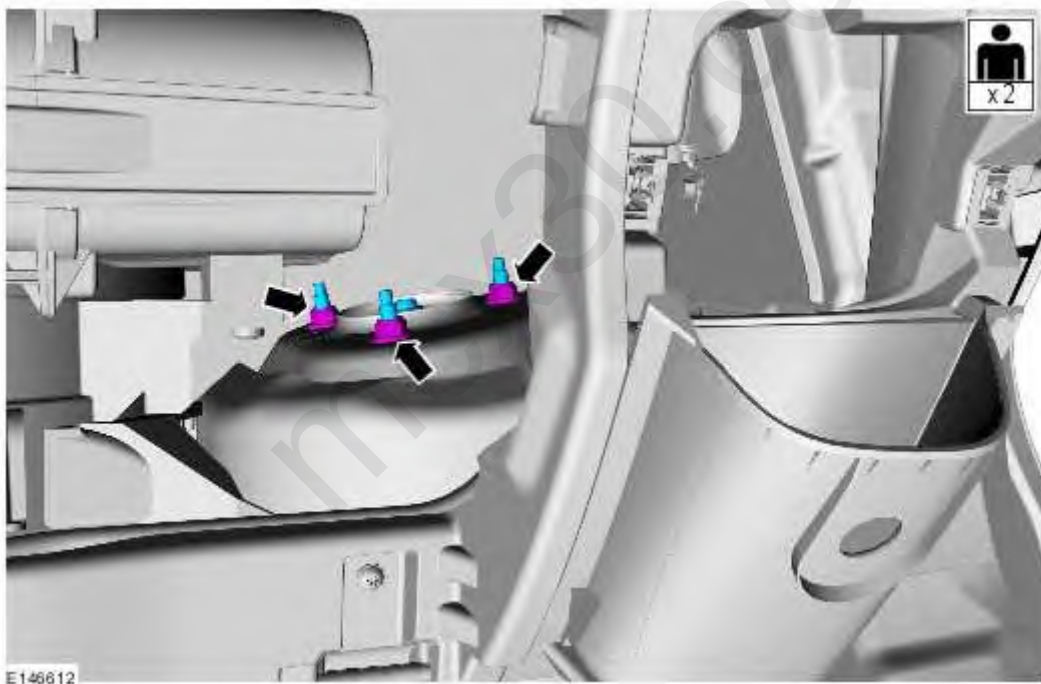

Installation

1. To install, reverse the removal procedure.