


Removal and Installation

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2.
 1. Torque: 175 Nm
 2. Torque: 110 Nm

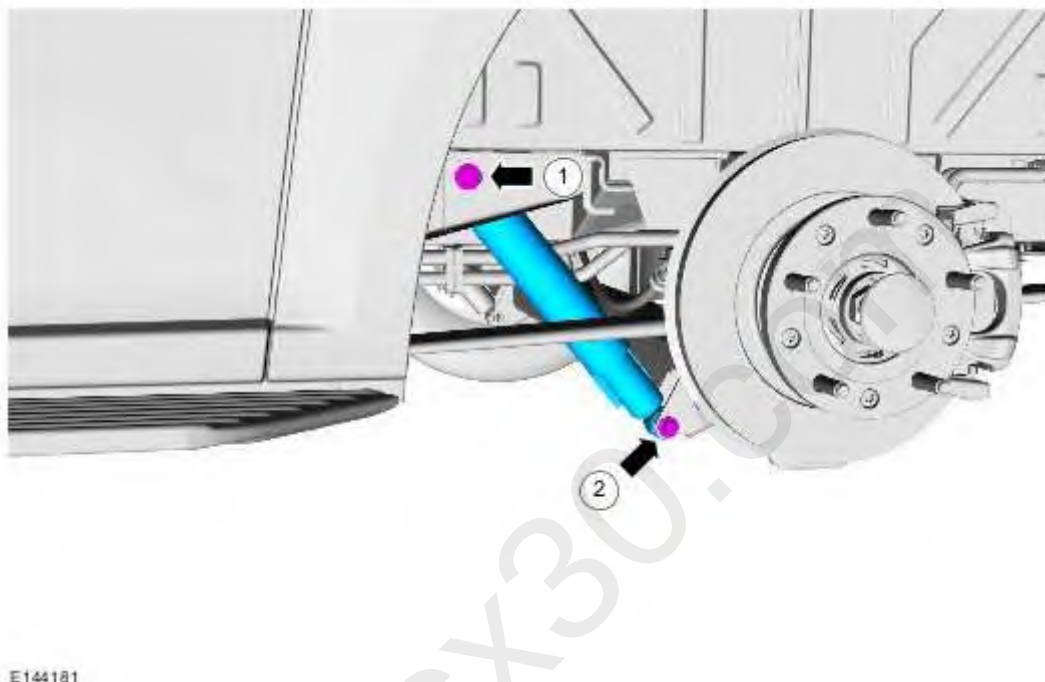

Installation

1. To install, reverse the removal procedure.