

### Removal and Installation


#### Removal



**NOTICE:** Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.


**NOTE:** Removal steps in this procedure may contain installation details.

1. **NOTE:** Do not use power tools to remove or install the stabilizer bar link nuts. Damage to the stabilizer bar link ball joints and boots may occur.
2. **Torque:** 70 Nm

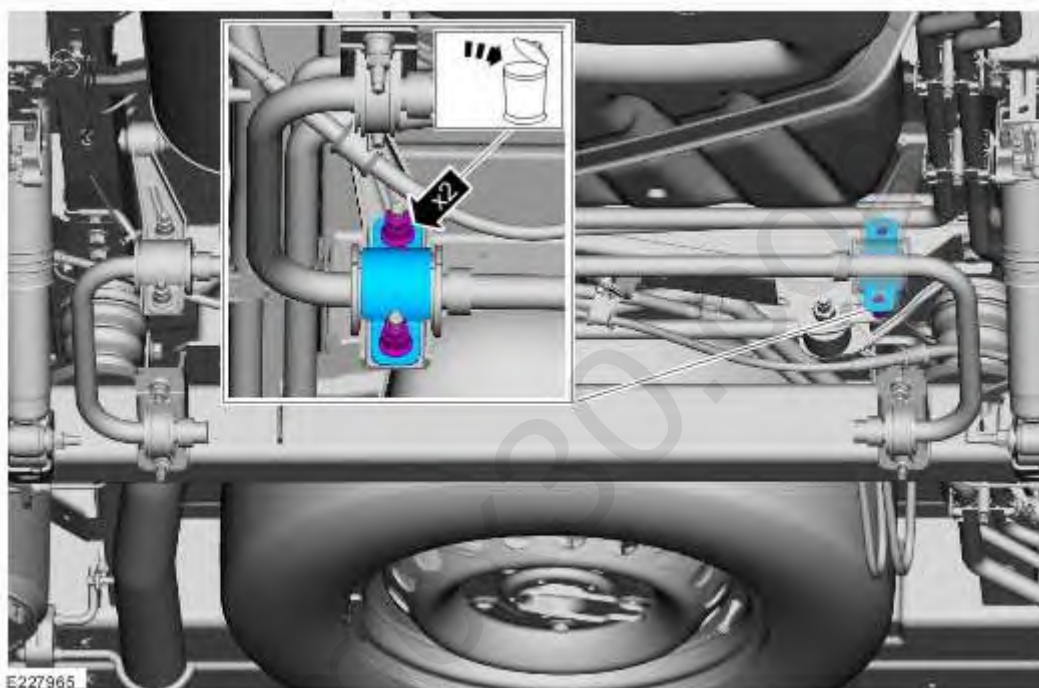


3. Remove and discard the rear stabilizer bar bracket bolts and remove the rear stabilizer bar.

**Torque:** 70 Nm

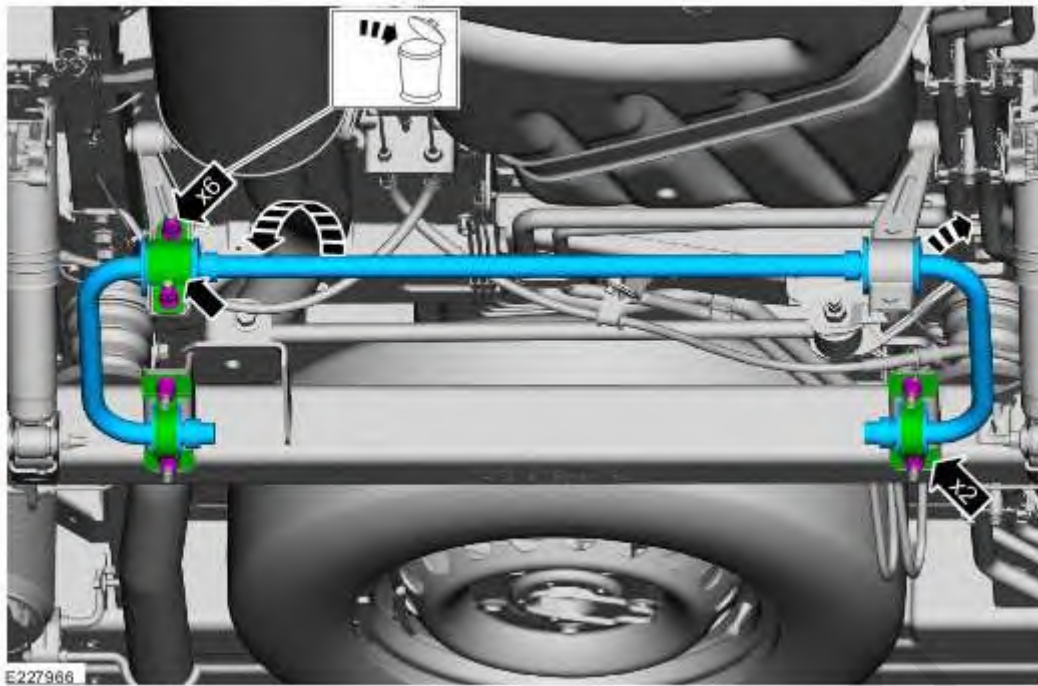

4. **NOTE:** Do not use any lubrication on the stabilizer bar or the bushings or damage to bushings may occur.  
**NOTE:** Stabilizer bar bushings must be installed with slits facing the front of the vehicle.  
 Inspect and, if necessary, install new stabilizer bar bushings.

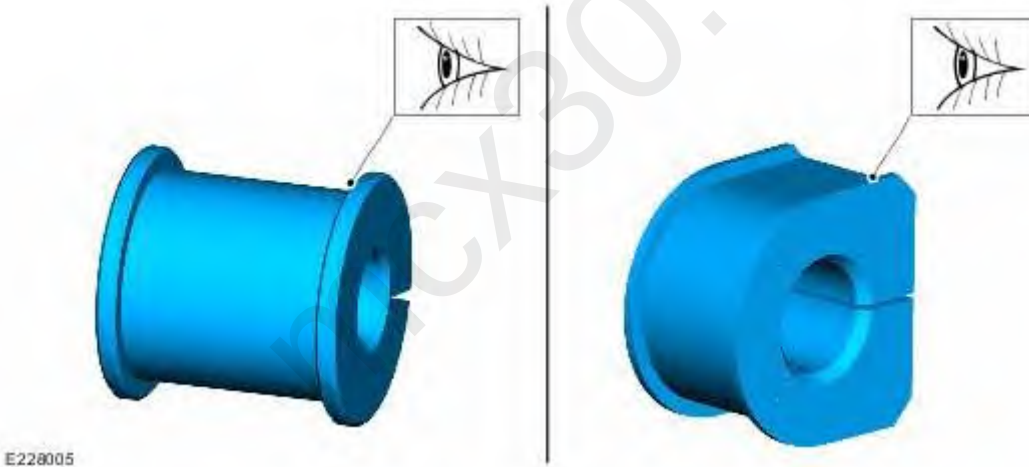

## Installation

1. To install, reverse the removal procedure.
2. **NOTE:** Apply water to the brackets to aid in installation.  
 Press the rear stabilizer bar brackets in place onto the rear stabilizer bar bushings.