

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. On both sides, remove and discard the rear stabilizer bar link bolts and nuts and remove the rear stabilizer bar link.

Torque:

1. 110 Nm
2. 70 Nm

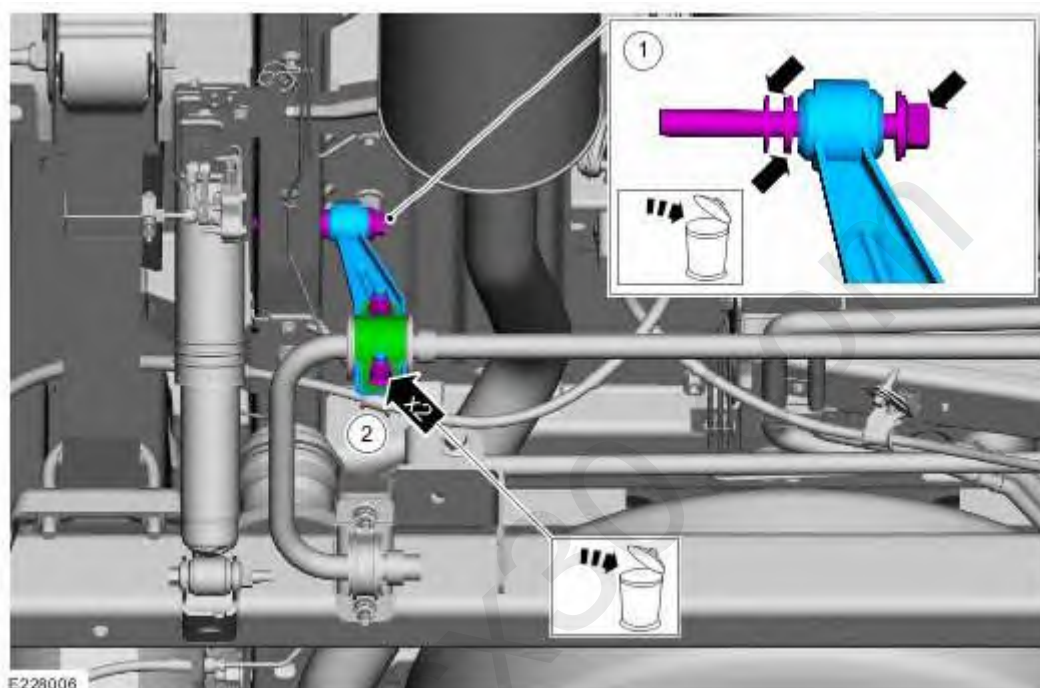

Installation

1. To install, reverse the removal procedure.