

Removal and Installation

Removal

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).

2. NOTICE:

 Do not use heat to loosen a seized wheel nut.

 Do not use power tools on locking wheel nuts.

Loosen: 1 turn(s)



3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).


- 4.



Installation

1.  NOTICE: Make sure that the mating faces are clean and free of corrosion and foreign material.

NOTE: Only tighten the nuts finger tight at this stage.

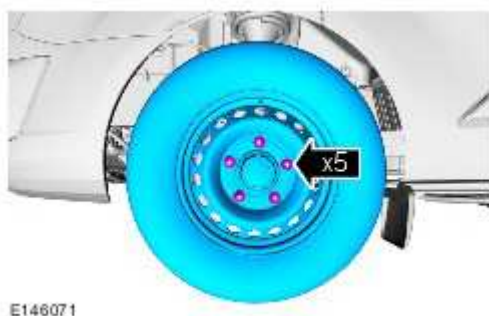

2. Lower the vehicle.

Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

3. *Torque:* 200 Nm



mcx30.com