


General Procedures

Activation

1.  **WARNING:** Vent all air pressure from the air suspension system prior to disconnecting or removing any air suspension components. It is dangerous to remove air suspension components while under pressure. Failure to follow this instruction may result in serious personal injury.
2. **NOTE:** Carry out this procedure if fluid (water and/or oil) is found in the air tube. Purge fluid from rear air tubes and install new components if affected. Disconnect the air tube at the air compressor drier.
3. Connect shop air to the disconnected air tube and blow any fluid out.
4. **NOTE:** When installing the air tubes, make sure the white paint line on the tube is fully inserted into the fitting for correct installation.
NOTE: Make sure that new components are installed.
5. Install a new air compressor drier

Refer to: [Air Suspension Compressor](#) (204-05 Vehicle Dynamic Suspension, Removal and Installation).

6. Reconnect the air tube to the air compressor drier.
7. Fitting the polyamide tube into the assy.

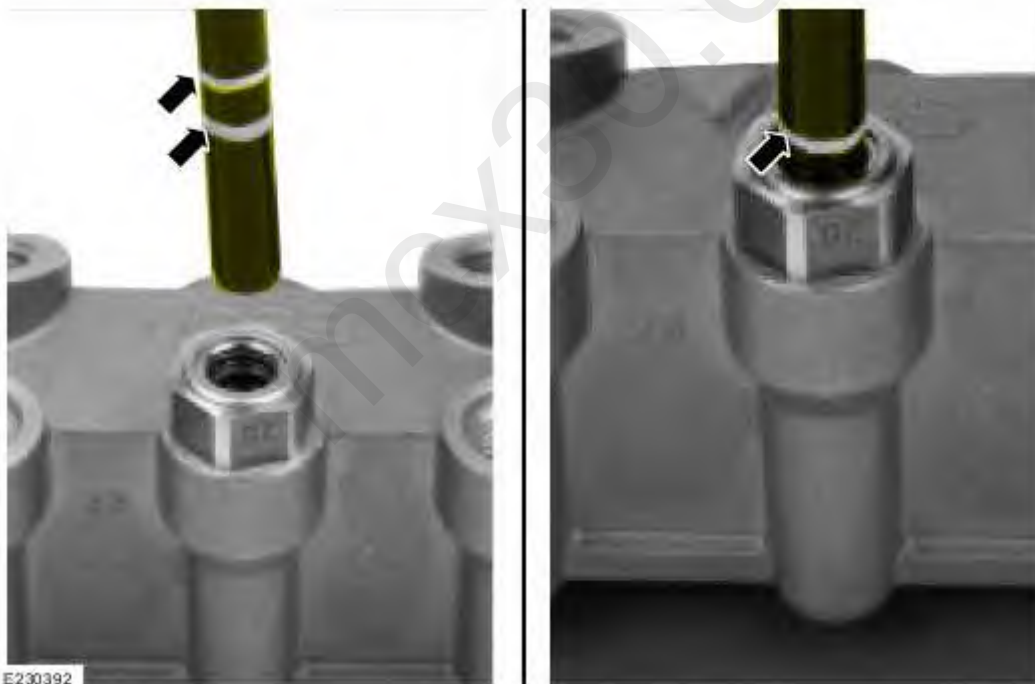

8. Make sure that all air tube fittings are sealed.