

Removal and Installation

Removal



NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the released parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

NOTE: Removal steps in this procedure may contain installation details.

NOTE: The RR and LR height sensor assemblies cannot be used on opposite sides of the vehicle.


1. Disable the RAS system for service.

Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).

2. LR height sensor.

Torque:

3. 9 Nm
4. 25 Nm

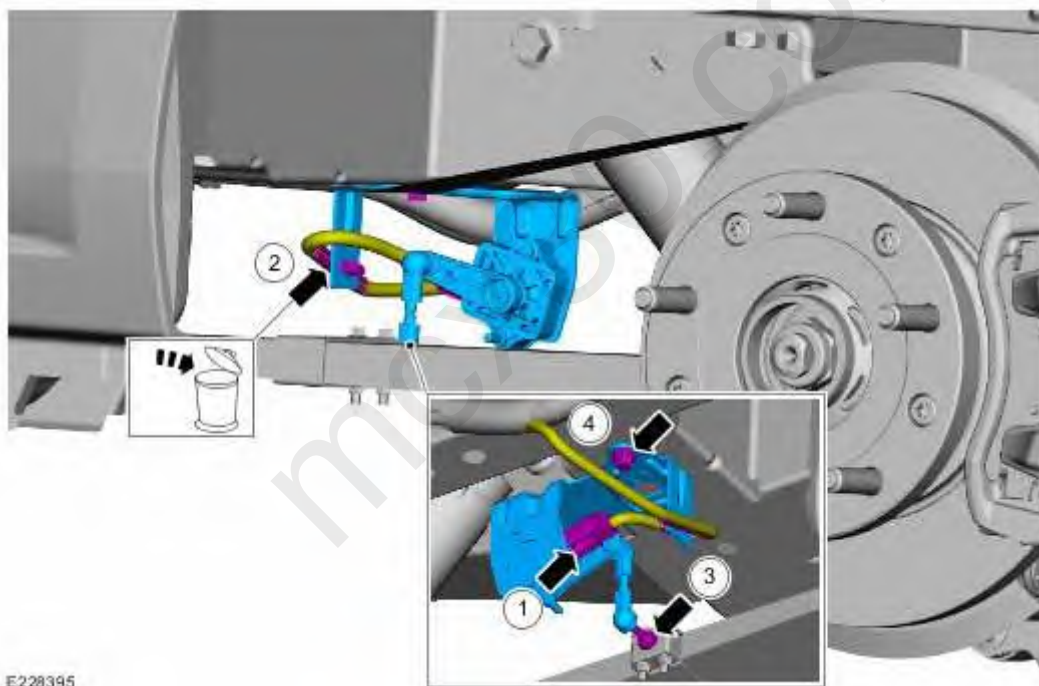


E228395

3. RR height sensor.

Torque:

3. 9 Nm
4. 25 Nm

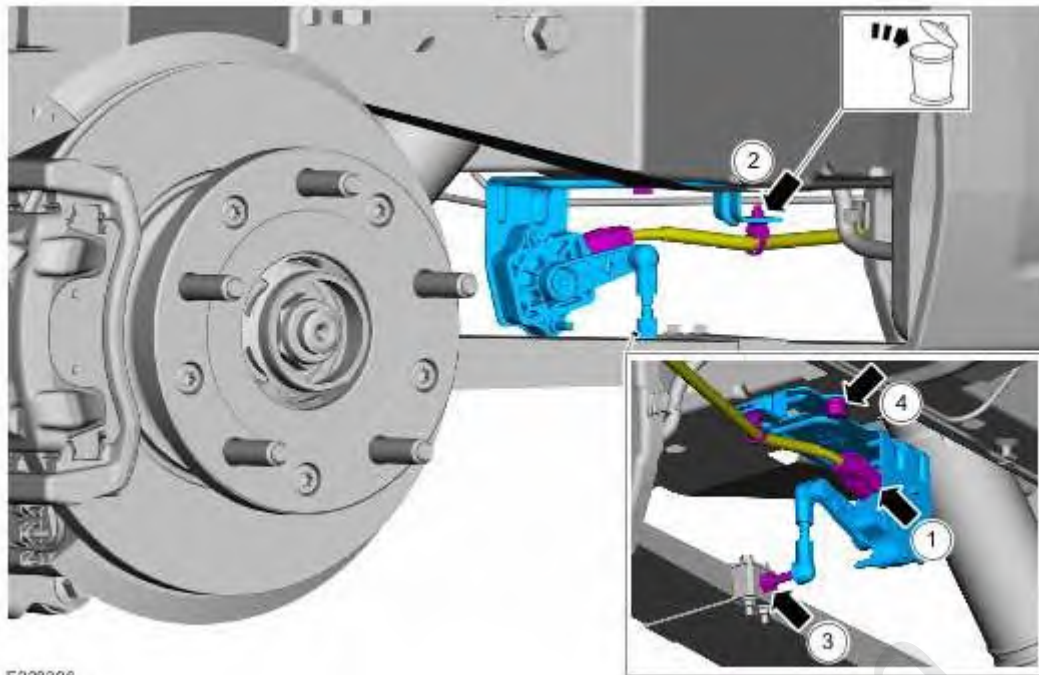

Installation

1. To install, reverse the removal procedure.
2. Calibrate the LR and RR height sensors.

Refer to: Suspension Height Sensor Calibration (204-05 Vehicle Dynamic Suspension, General Procedures).