

Removal and Installation


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Air Suspension Compressor](#) (204-05 Vehicle Dynamic Suspension, Removal and Installation).
2. Remove jumper tube by rotating clip 90 degrees and pulling off the nozzle.
3. NOTE: Make sure that the air filter O-ring does not remain inside of the compressor assembly.
NOTE: Inspect the compressor drier O-ring for damage and install a new O-ring as necessary.

Remove the compressor drier screw.

Torque: 3 Nm

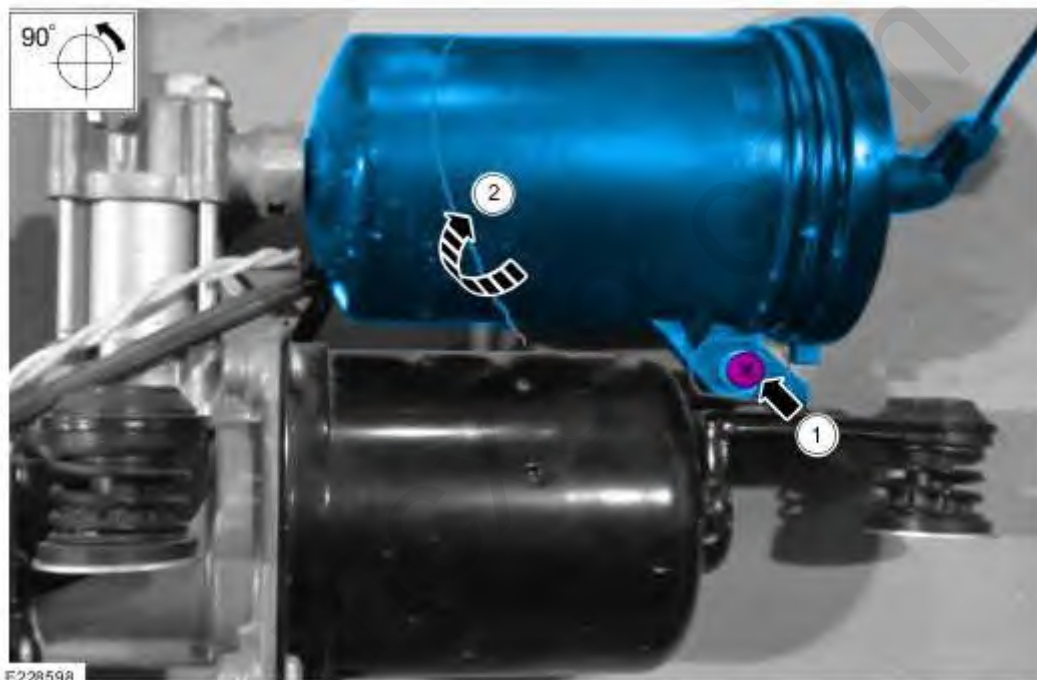

4. Rotate the compressor drier 90 degrees counterclockwise to unlock, then remove the air compressor drier.

Installation

1. To install, reverse the removal procedure.
2. NOTE: When installing the air lines, make sure the white paint line is fully inserted into the fitting for correct installation.
To install, turn clip back 90 degrees and push firmly onto drier nozzle until it clicks and locks in place.