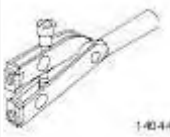


Removal and Installation**Special Tool(s) / General Equipment**

	204-169 Clamping Tool, Boot Retaining Clamp
	308-046 Installer, Transmission Extension Housing Bushing/Seal
Copper Hammer	
Flat Headed Screw Driver	
Hydraulic Press	
Puller	
Wooden Block	


Removal

6-Speed Automatic Transmission - 6F55

1. Refer to: [Front Halfshaft LH - 6-Speed Automatic Transmission - 6F55](#) (205-04 Front Drive Halfshafts, Removal and Installation).
Refer to: [Front Halfshaft RH - 6-Speed Automatic Transmission - 6F55](#) (205-04 Front Drive Halfshafts, Removal and Installation).


All vehicles

2.

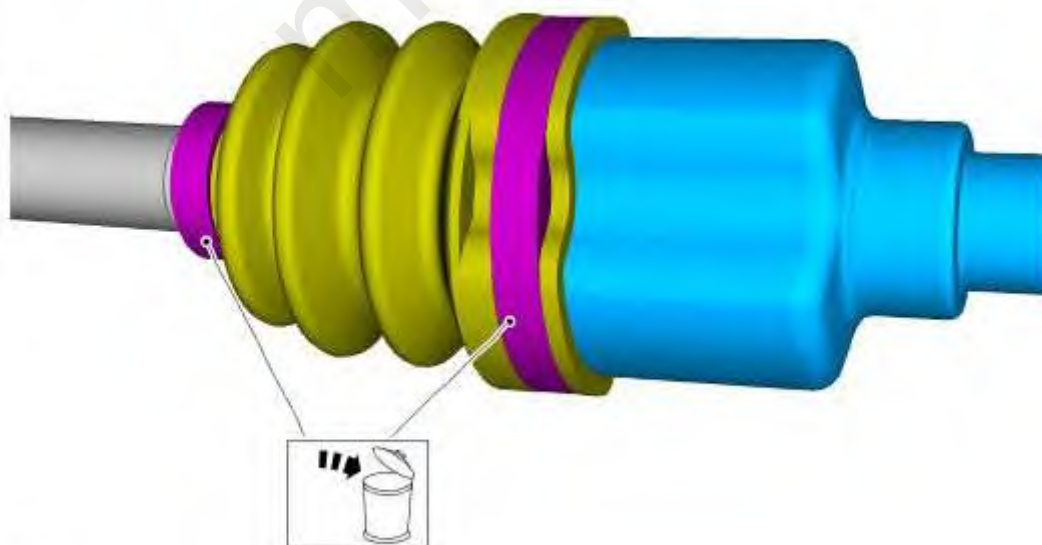


E105704

3. Use the General Equipments: [Wooden Block](#), [Copper Hammer](#)

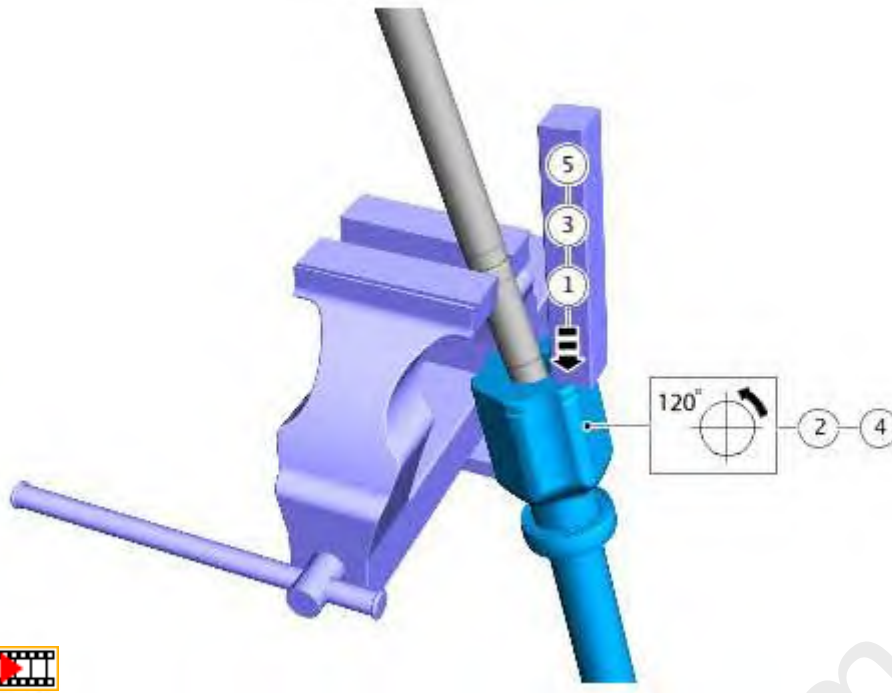


4.

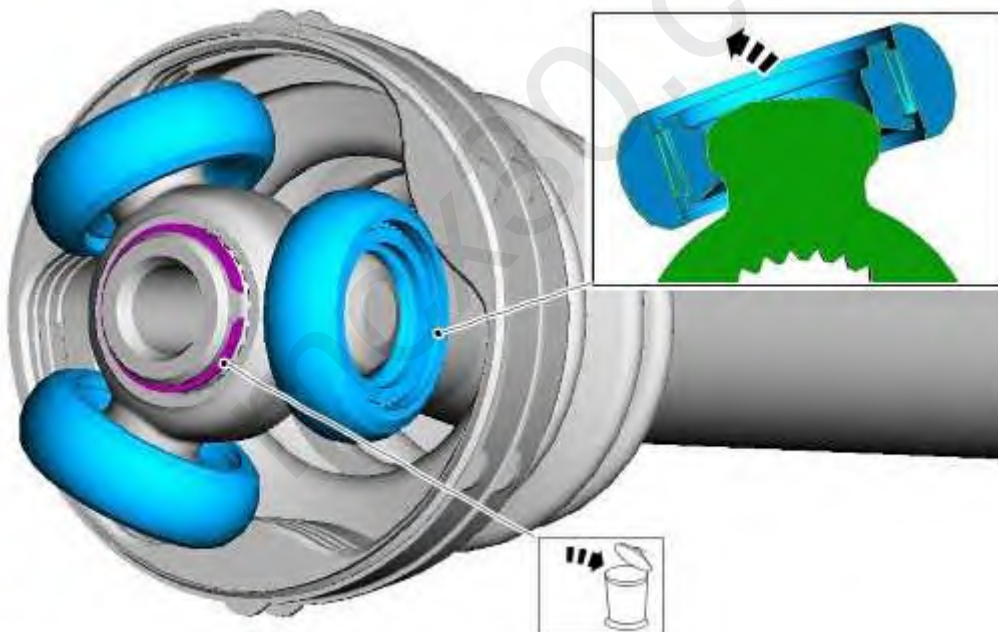

E78743


5. Use the General Equipments: [Hydraulic Press](#), [Puller](#)

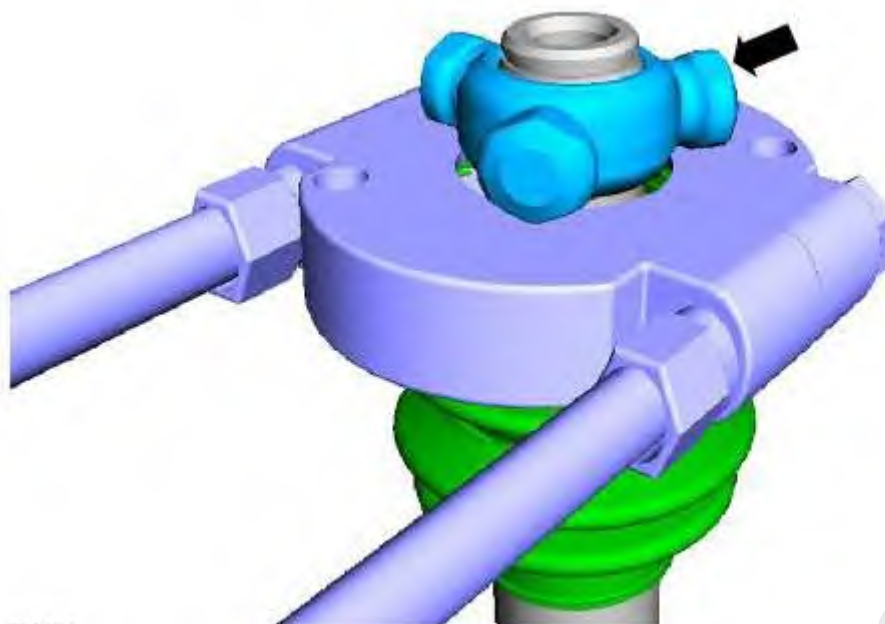

E78744


Installation

1. Use Special Service Tool: [308-046](#).
Use the General Equipment: [Copper Hammer](#)

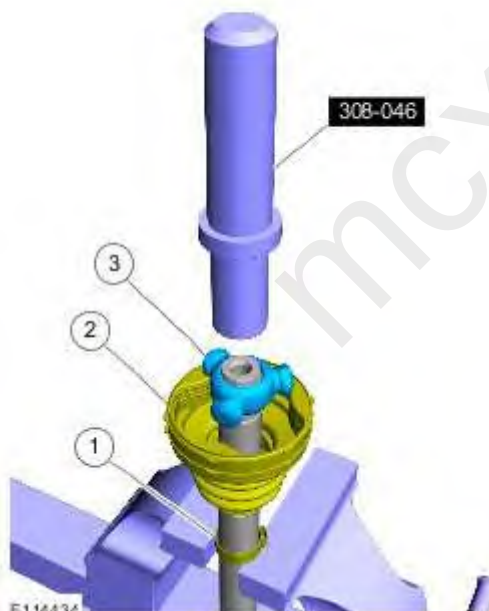


E114434

2. 1. NOTE: Make sure that a new component is installed.

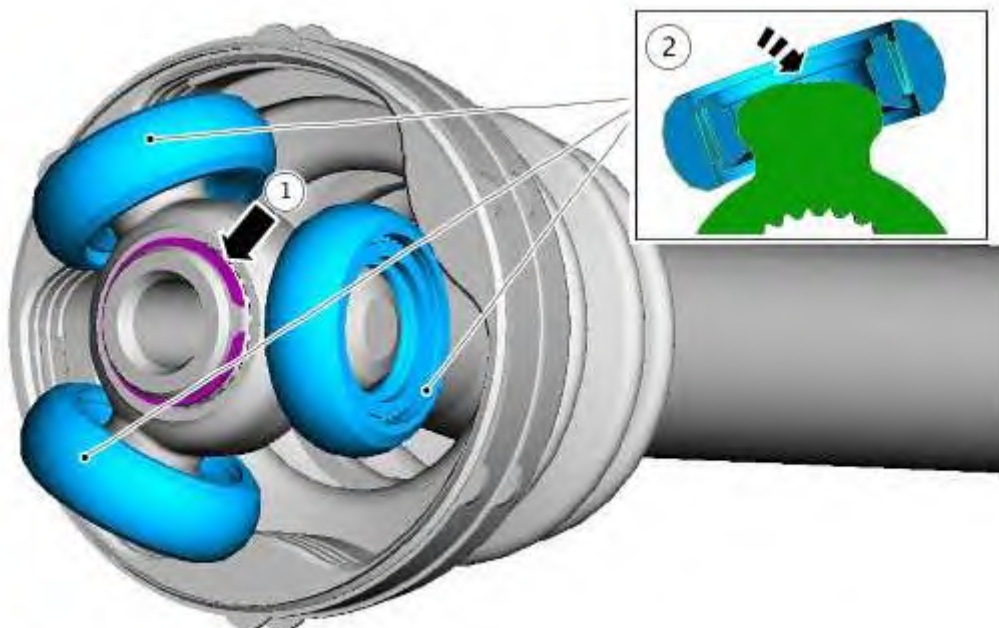

E140240


3. NOTE: Make sure that the component is clean, free of foreign material and lubricant.

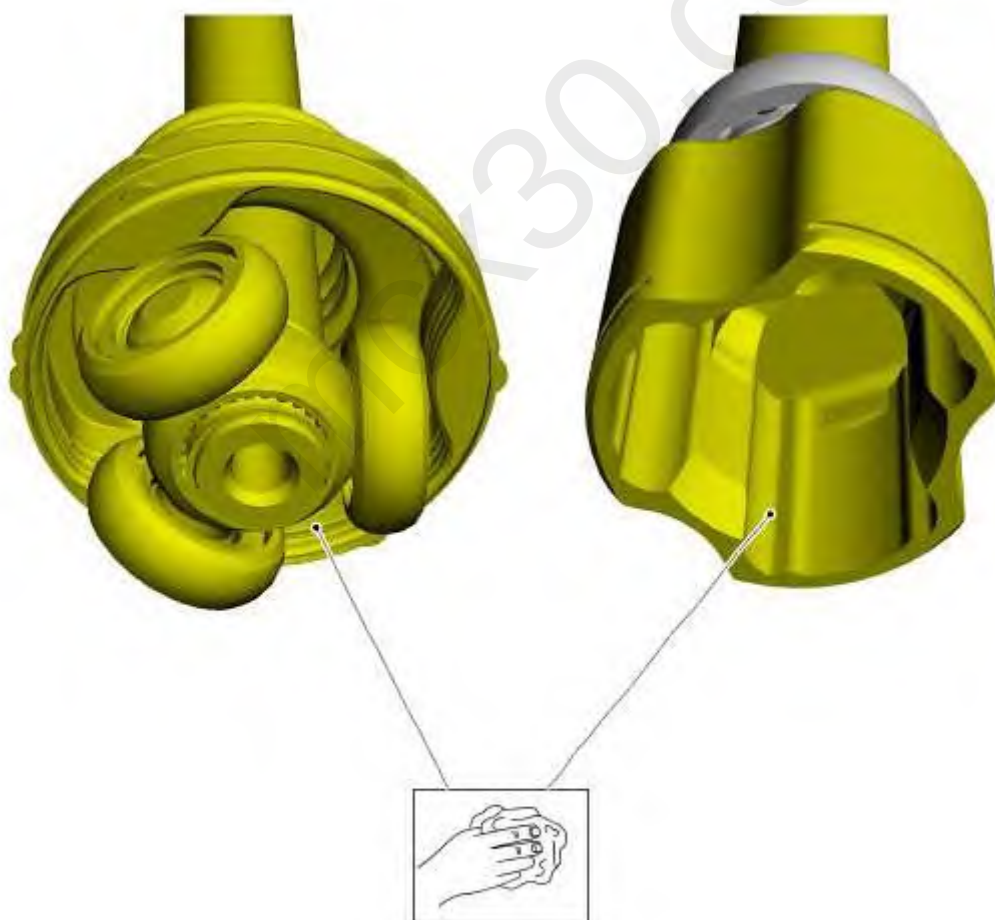

E113013


4. NOTE: Make sure that a new component is installed.

Use Special Service Tool: [204-169](#).
Torque: 21 Nm

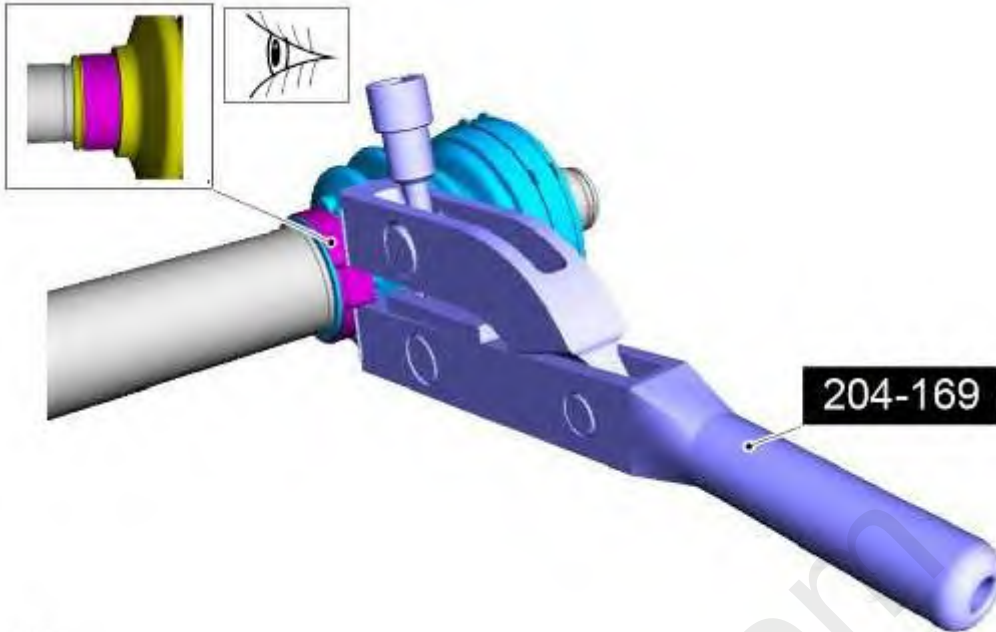

E137234



5. Refer to: [Specifications](#) (205-04 Front Drive Halfshafts, Specifications).

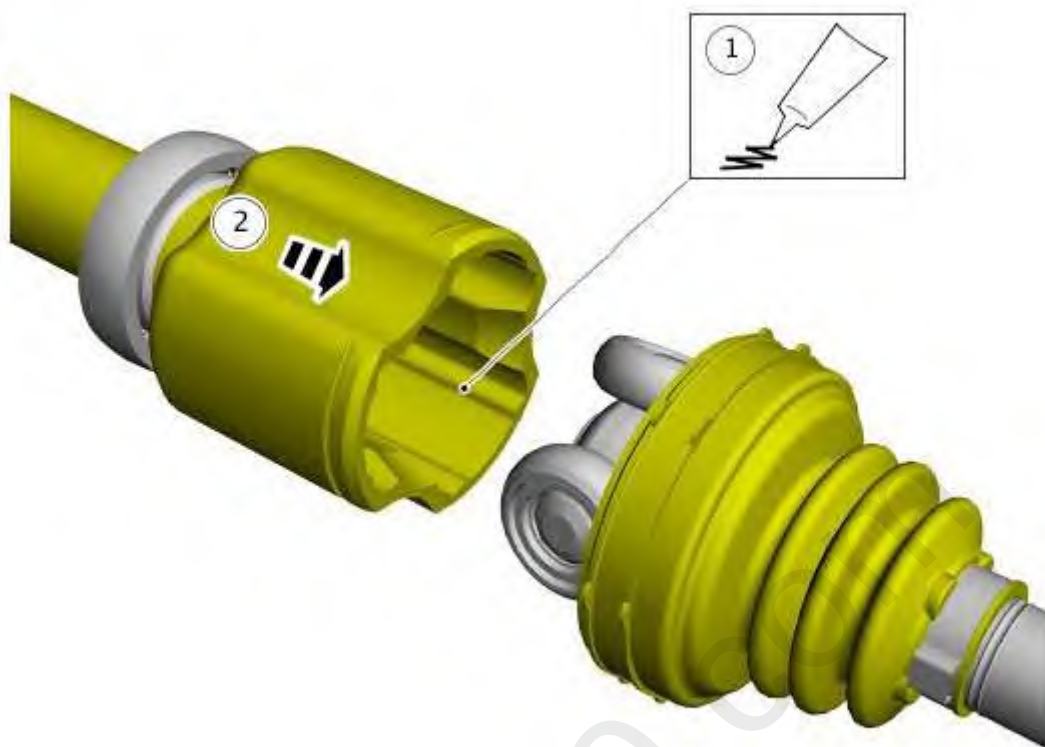

E112739

6.
 1. **NOTE:** Make sure that the rubber is not damaged.
Release any trapped air.

Use the General Equipment: [Flat Headed Screw Driver](#)
 - 2.
 - 3.
 4. *Use the General Equipment:* [Flat Headed Screw Driver](#)

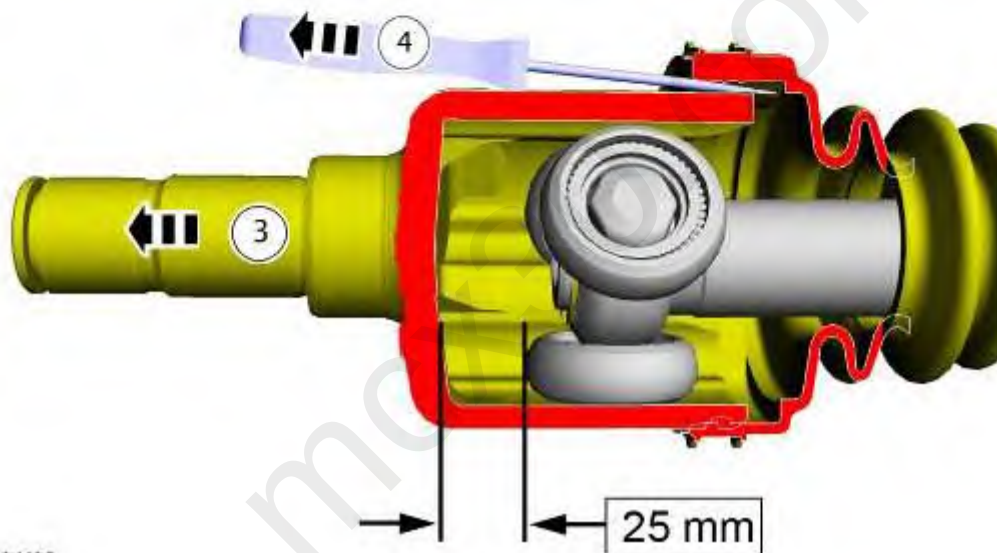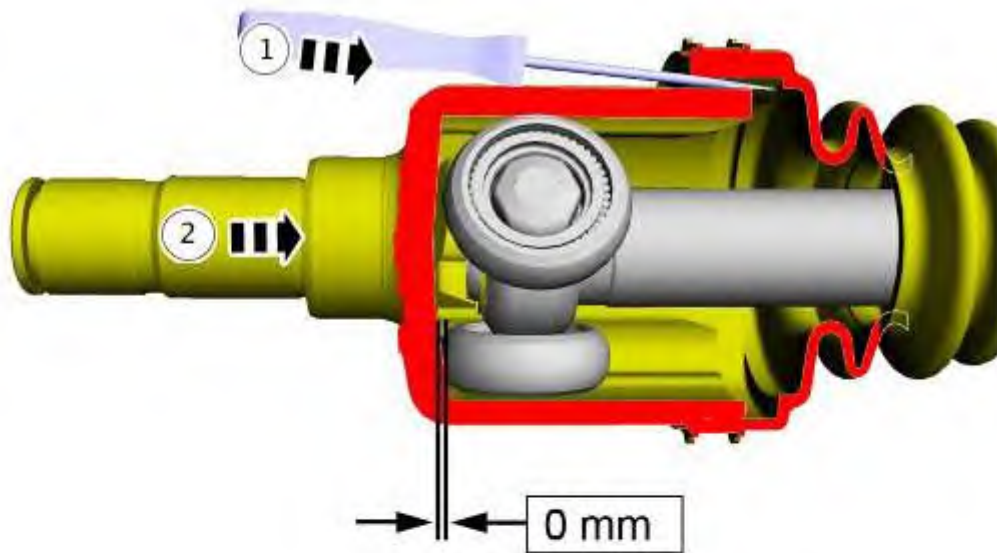


E114410

7. **NOTE:** Make sure that a new component is installed.

Use *Special Service Tool*: [204-169](#).

Torque: 21 Nm

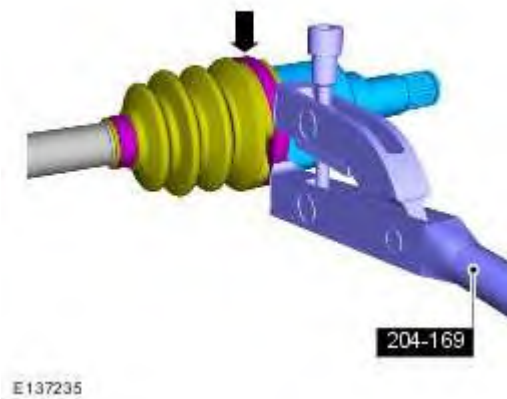

6-Speed Automatic Transmission - 6F55

8. Refer to: [Front Halfshaft LH - 6-Speed Automatic Transmission - 6F55](#) (205-04 Front Drive Halfshafts, Removal and Installation).
Refer to: [Front Halfshaft RH - 6-Speed Automatic Transmission - 6F55](#) (205-04 Front Drive Halfshafts, Removal and Installation).