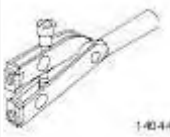



Removal and Installation

Special Tool(s) / General Equipment

	204-169 Clamping Tool, Boot Retaining Clamp
Flat Headed Screw Driver	


Removal

1. Refer to: [Inner Constant Velocity \(CV\) Joint Boot](#) (205-04 Front Drive Halfshafts, Removal and Installation).
- 2.

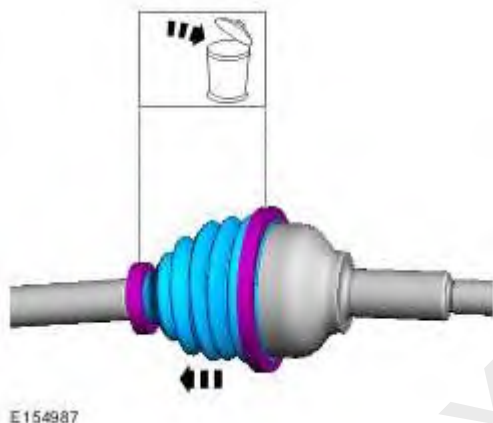


Installation

1. **NOTE:** Make sure that the component is clean, free of foreign material and lubricant.

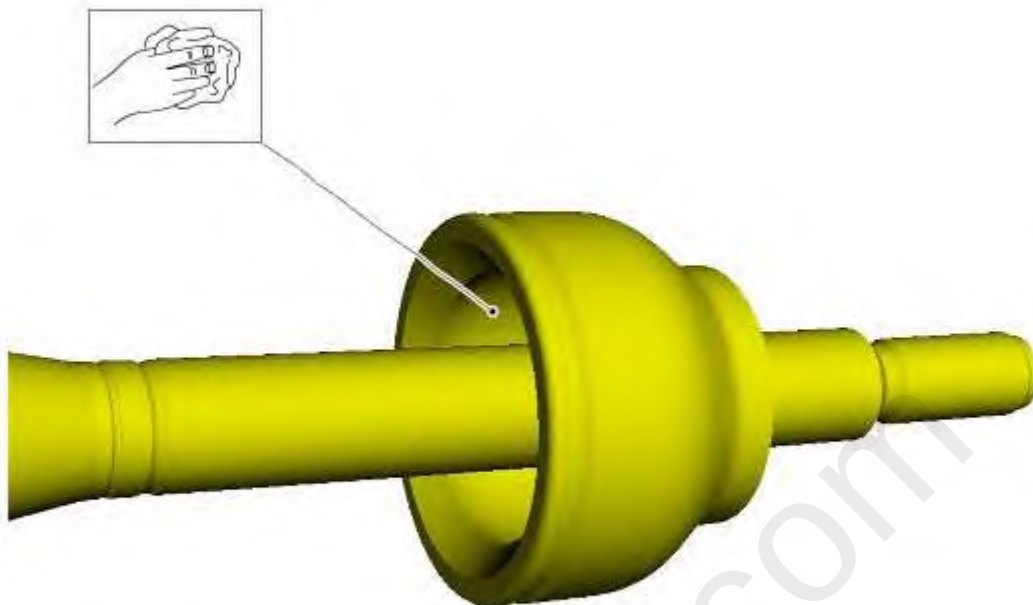

E139752


2. Refer to: [Specifications](#) (205-04 Front Drive Halfshafts, Specifications).

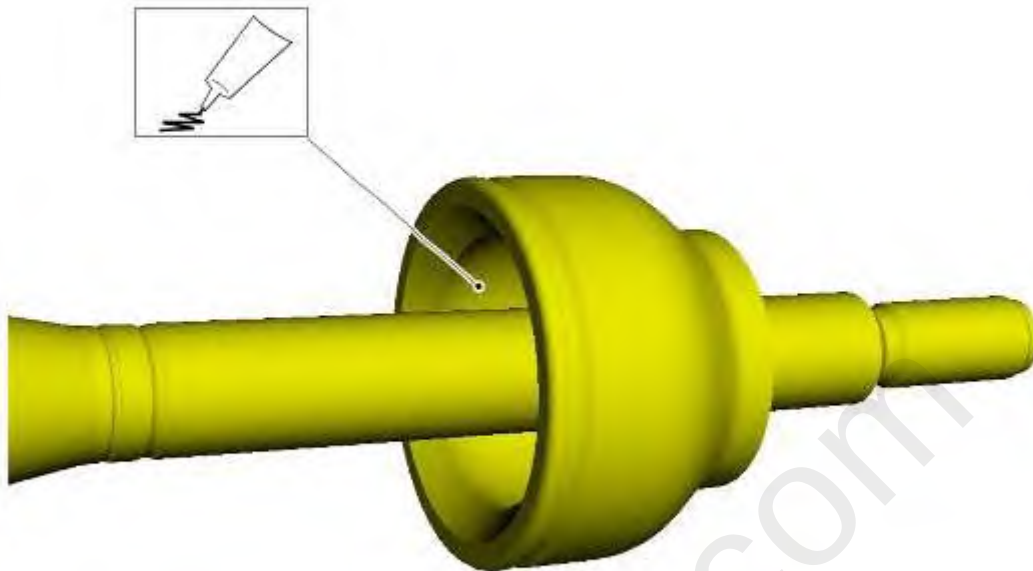

E139753


3. **NOTE:** Make sure that the rubber is not damaged.
Release any trapped air.

Use the General Equipment: [Flat Headed Screw Driver](#)

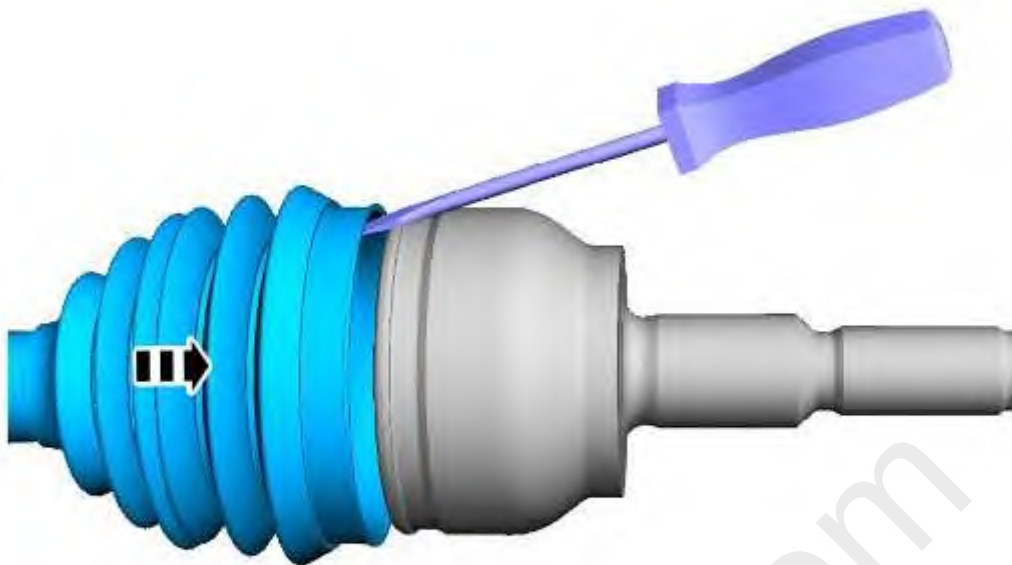

E138467

4.

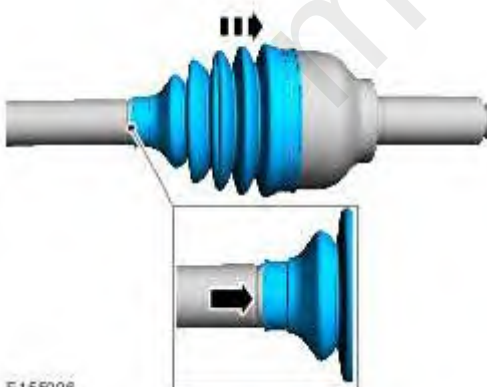


E155096

5. **NOTE:** Make sure that new components are installed.

Use *Special Service Tool*: [204-169](#).

Torque: 21 Nm

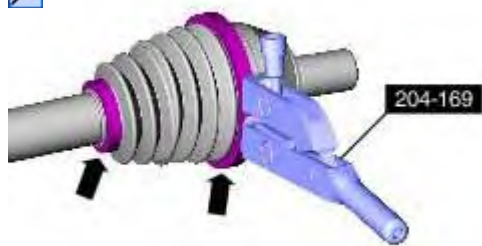

E77542

6. Refer to: [Inner Constant Velocity \(CV\) Joint Boot](#) (205-04 Front Drive Halfshafts, Removal and Installation).

mcx30.com