


General Procedures

General Equipment


Fluid Container

Draining

1. Refer to: Brake System Health and Safety Precautions (100-00 General Information, Description and Operation).
- 2.

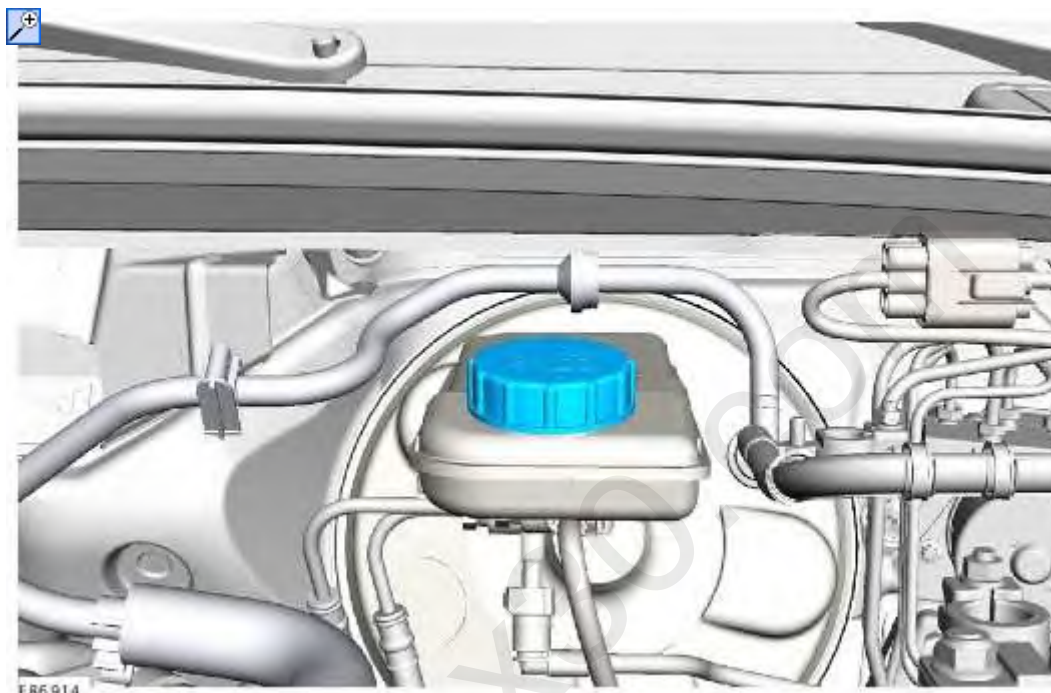


3. Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
4. On both sides.

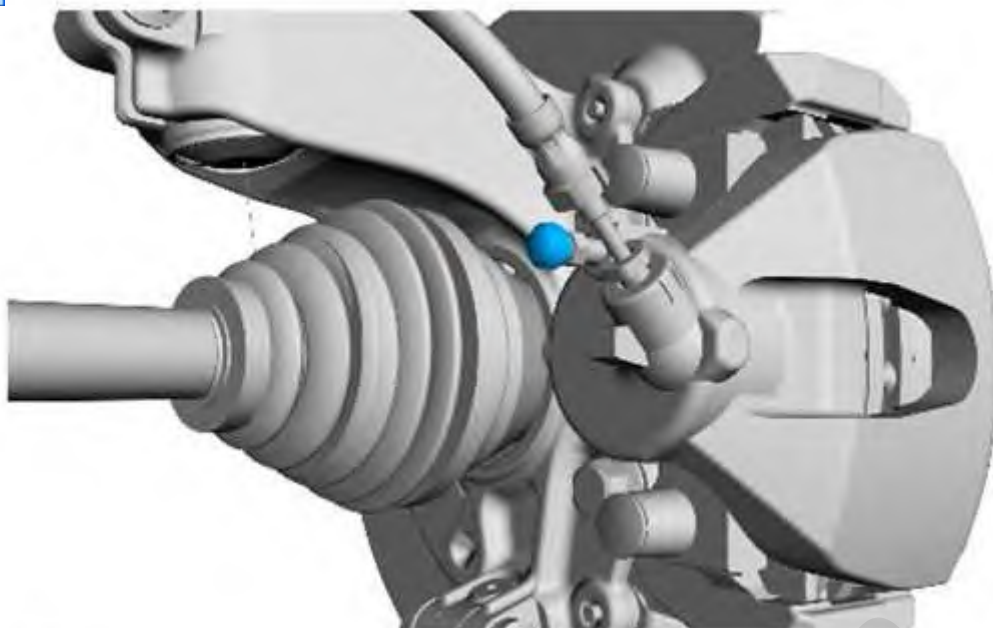

E139455

5. On both sides.


Use the General Equipment: [Fluid Container](#)

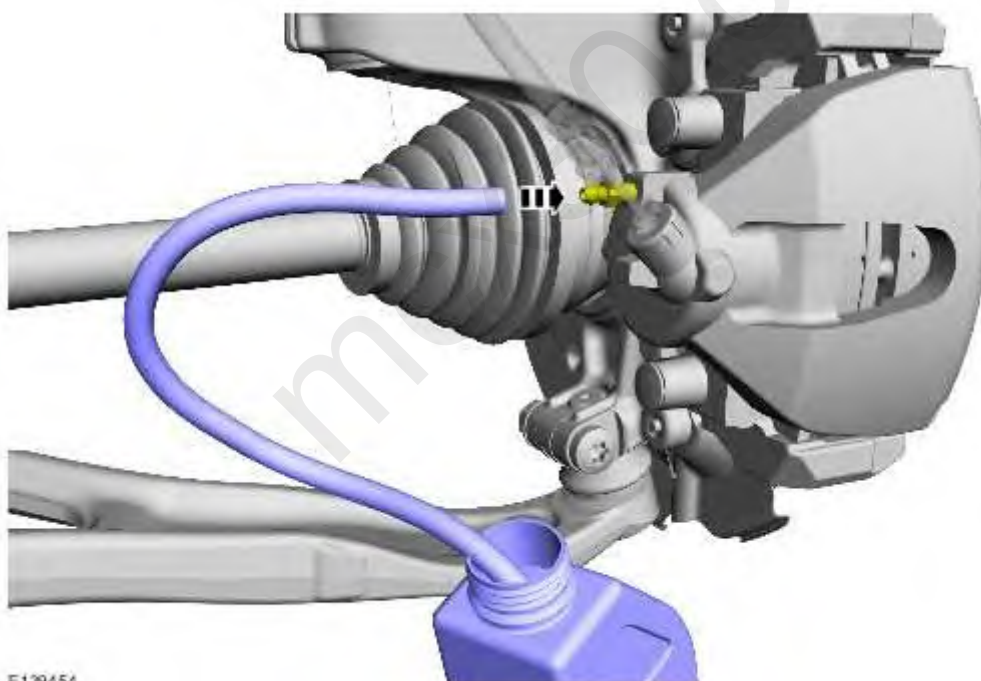

E139454


6. On both sides.

Loosen: 180°

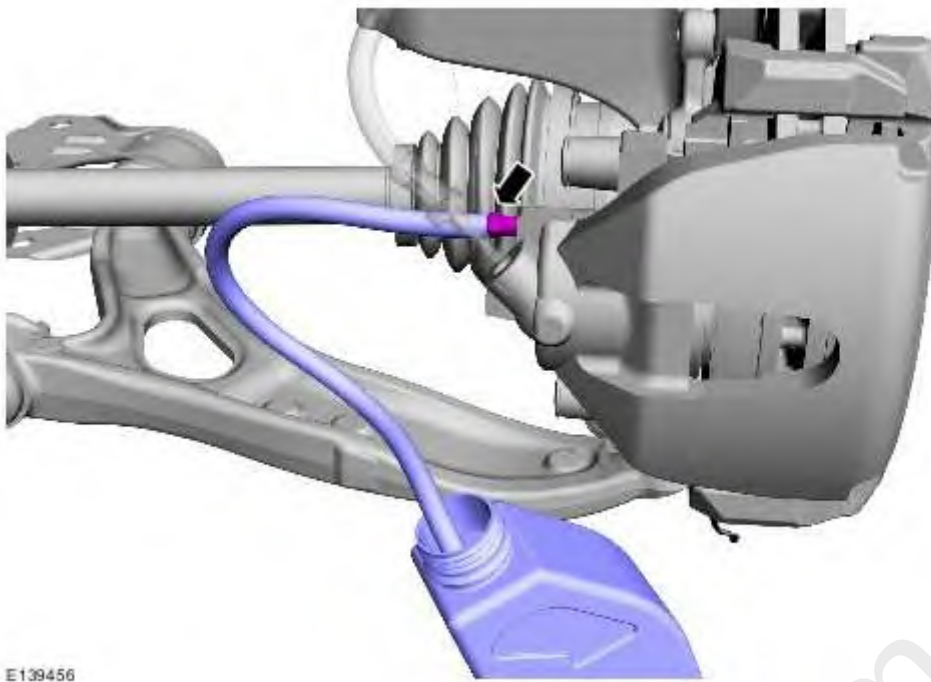

E139456


7.

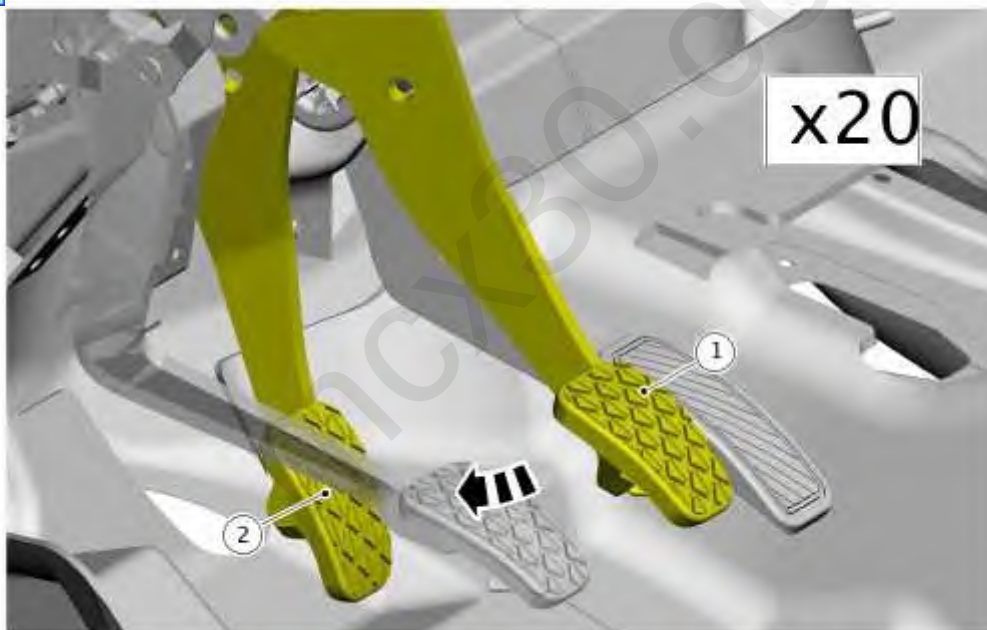

E137063

8. On both sides.

Torque: 9 Nm

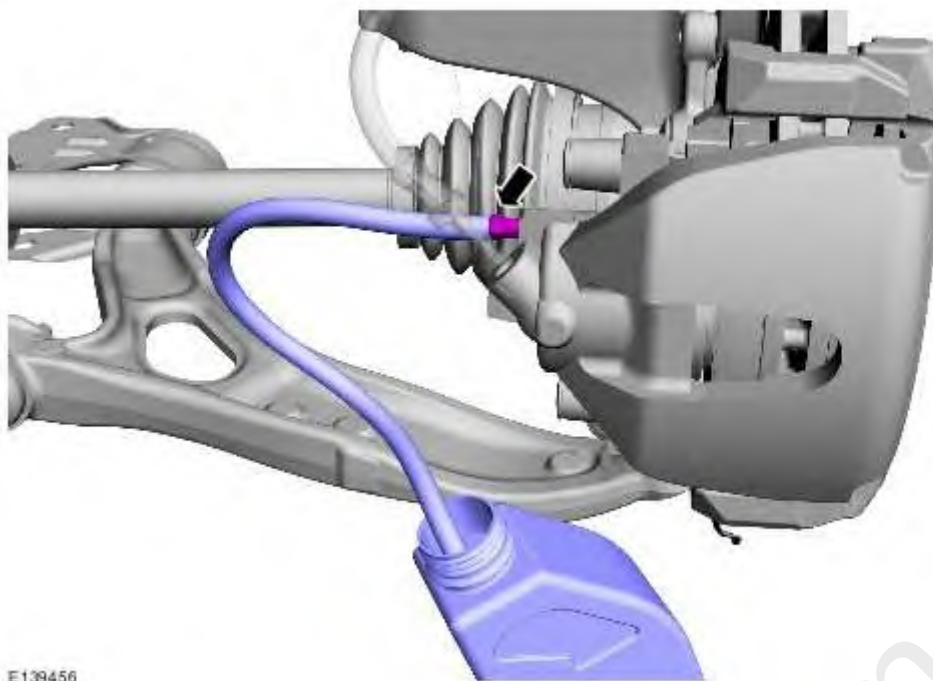

Filling

1. Refer to: [Brake System Bleeding](#) (206-00 Brake System - General Information, General Procedures).
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).
Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).