

Removal and Installation

General Equipment

Hose Clamp(s)

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. If equipped.




3.  **NOTICE:** Make sure that all openings are sealed.
NOTE: Note the position of the component before removal.

Use the General Equipment: [Hose Clamp\(s\)](#)

Torque: 17 Nm

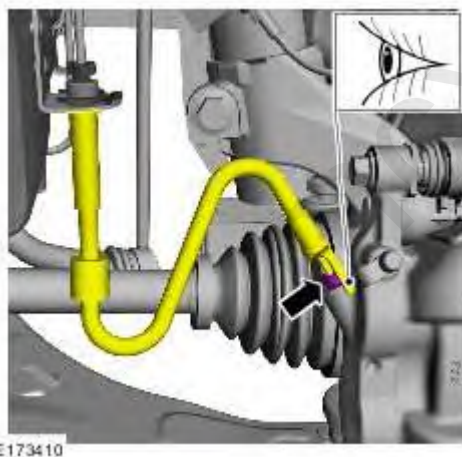

4. Torque: 60 Nm

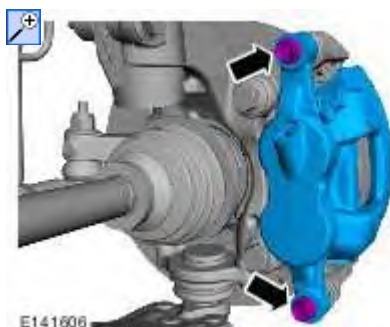

Installation

1. **NOTE:** Make sure that the component is installed to the position noted before removal.
To install, reverse the removal procedure.
2. Refer to: [Component Bleeding](#) (206-00 Brake System - General Information, General Procedures).

mcx30.com