

Removal and Installation

General Equipment

Brake Caliper Piston Retractor



Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. If equipped.




3.  **NOTICE:** Make sure that no load is placed on the brake hose.
Torque: 60 Nm

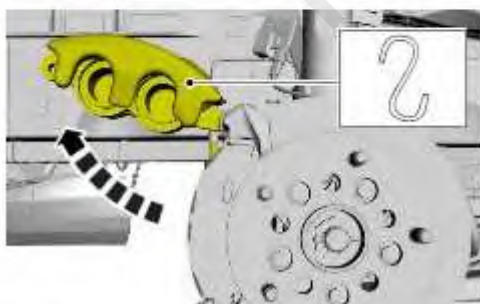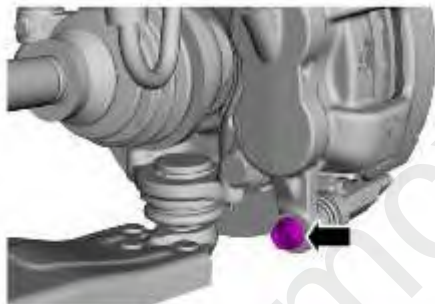

4. **NOTE:** Note the position of the components before removal.
NOTE: Make sure that the brake pad contact points are clean and free of foreign material.

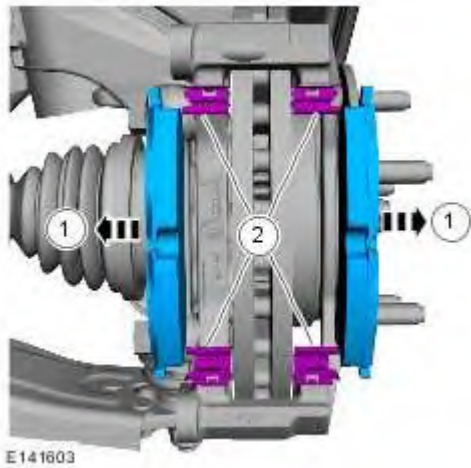

5. Use the General Equipment: [Brake Caliper Piston Retractor](#)

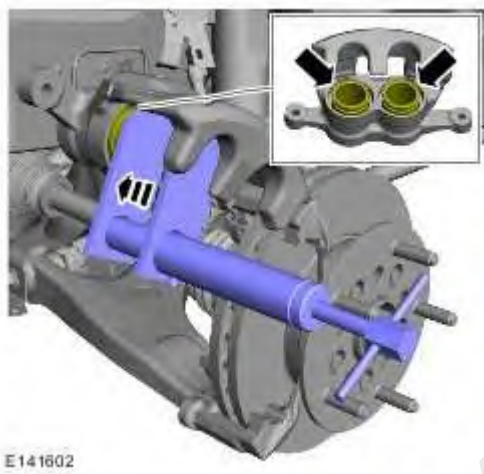

Installation

1. **NOTE:** Make sure that the components are installed to the position noted before removal.
To install, reverse the removal procedure.
2. Depress the brake pedal, check the brake fluid level in the brake fluid reservoir and top up as necessary with brake fluid.

Refer to: [Specifications](#) (206-00 Brake System - General Information, Specifications).